



Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>




FixYourDLP.com

Sponsored by 

BARCO

BARCO PROJECTION SYSTEMS

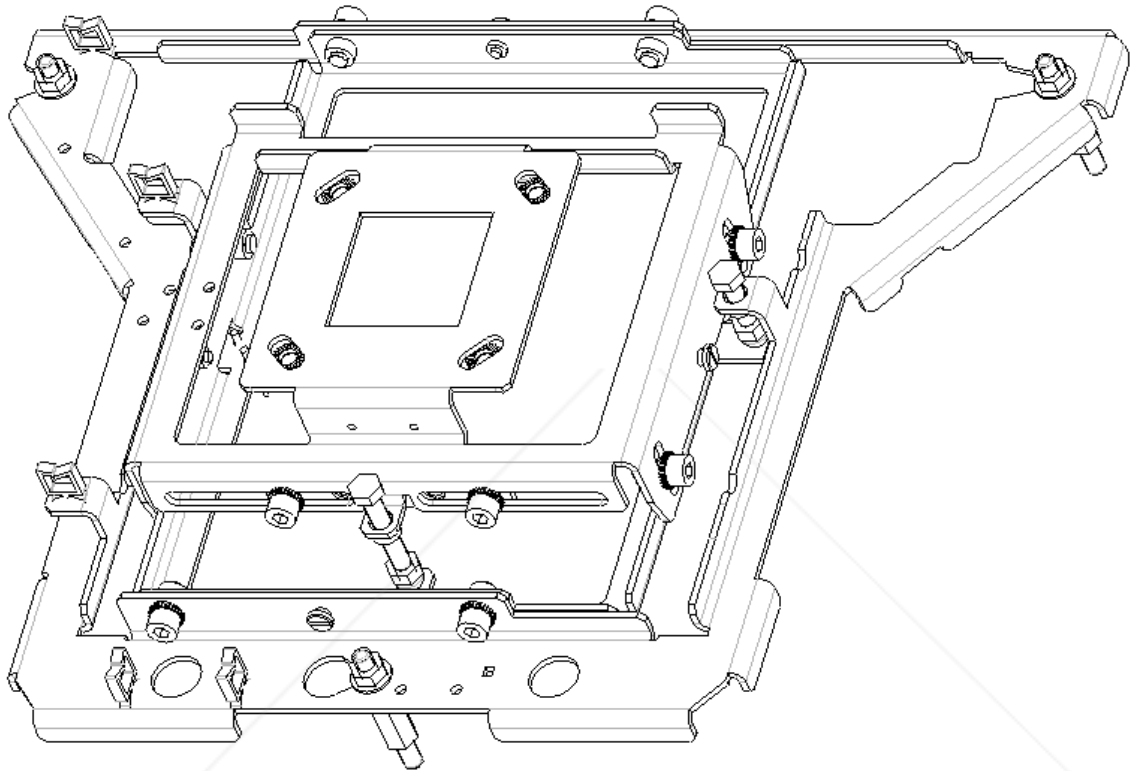

BARCO

CM CV120
& CV110

R9842330

 FixYourDLP.com
Sponsored by 

 
Discount-Merchants.com (800) 281-8860

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Due to constant research, the information in this manual is subject to change without notice.

Produced by BARCO NV, Jan 2004.
All rights reserved.

Trademarks are the rights of their respective owners.



Sponsored by 

BARCO n.v./Projection Systems

Noordlaan 5

B-8520 Kurne

Belgium

Tel : +32/56/368211

Fax : +32/56/351651

E-mail : sales.bps@barco.com

Visit Barco at the web : <http://www.barco.com>

Discount-Merchant.com (800) 281-8860
TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Printed in Belgium

Safety Guidelines

Caution: This frame is designed for use only with the Barco Cine VERSUM 120 and Cine VERSUM110 series projectors.

Use with other appliances may result in instability causing possible injury.

The ceiling mount supports max.25kg(55LB)

Warning

The ceiling should be capable of supporting a weight of at least 125 kg (275LB) if it can not, the ceiling must be reinforced.

Improper installation may result in serious personal injury



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Description and Contents of the kit

Purpose of the Kit


The kit is designed for the Cine VERSUM 120 and Cine VERSUM 110 series projectors and allows the projector to be mounted to the ceiling.

Contents of the Kit

Following items are included.

- Kit R9842330 : Ceiling mount
- Installation manual : R5976715
- Mounting bracket and Screws: R826744 Qty 3 Nos and R 826743 qty 1 No, - — Safety Chain set : B358938 Qty 1 Nos , R3623798 qty 2 Nos, G114700 qty 4 nos and G116550 qty 4 nos
- Cable cover assy

Illustration of the ceiling mount

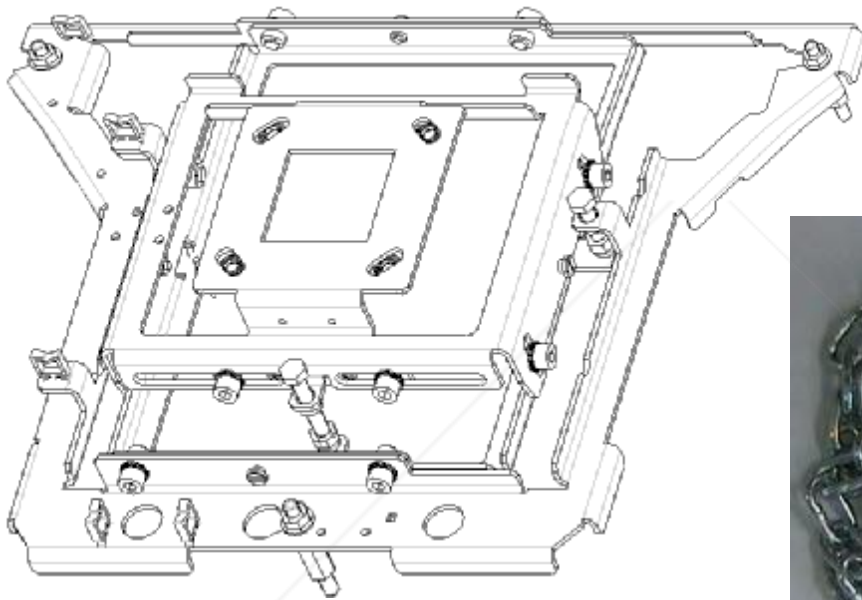

Remark: The ceiling mount can also be mounted using one of the 2 available bars (height adjustment) and cable cover assy.

R9841260: short bar R822922 and cable cover assy .

min length = 445mm(17.52 inch)

max length = 810 mm(31.89 inch)

R9841261: long bar R822923 cable cover kit R984 .

min length = 845mm(33.27 inch)

max length = 1210 mm(47.64 inch)


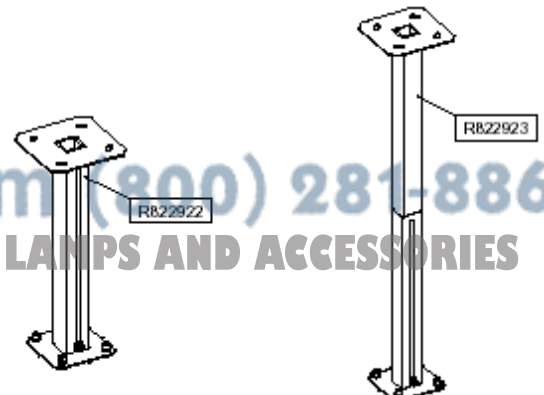


Illustration of the Cable Cover Assy:

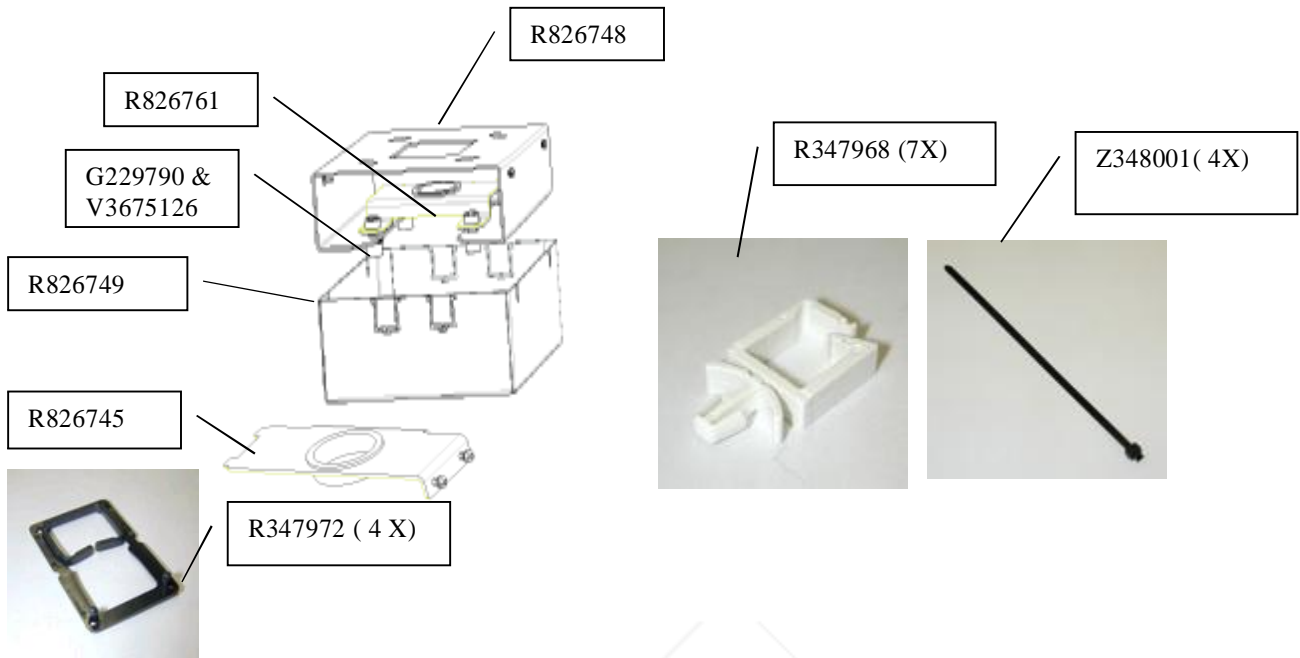

Note: The assembly is used only when ceiling mount is mounted along with IQ bar for hiding and guiding the cables.

Mounting the Assembly


Necessary Tools

1. Torx screw driver for M3 screw
2. Hexagonal driver (n° 6)
3. Ring spanner 12-13
4. Side spanner 12-13
5. Cross head screw driver for M8 Screw



Centering the ceiling mount

Mark the position on the ceiling hole. Since the center of the lens does not coincide with the center of the projector, the center of the lens has been marked on the ceiling mount.

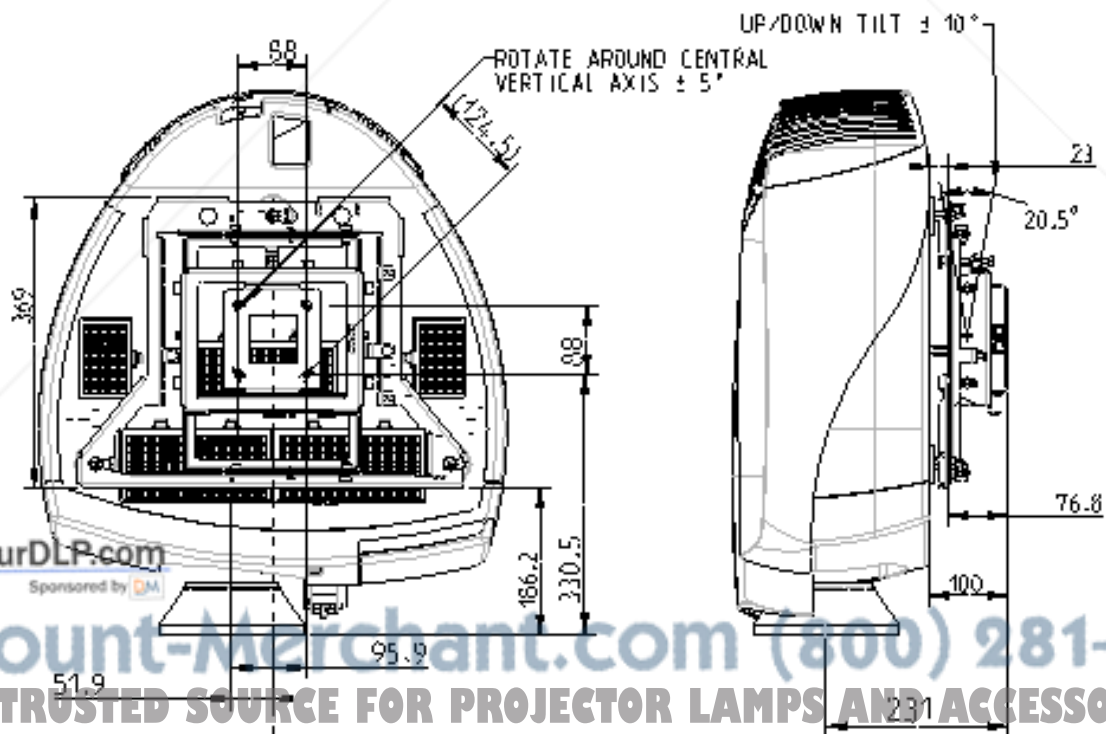


Remark

The horizontal shift of the ceiling mount allows to reenter the projector later on, However, centering decently the base plate insures a good horizontal shift margin afterwards.


Mounting the Assembly

The fixation can be done with standard M8 bolt (not supplied)

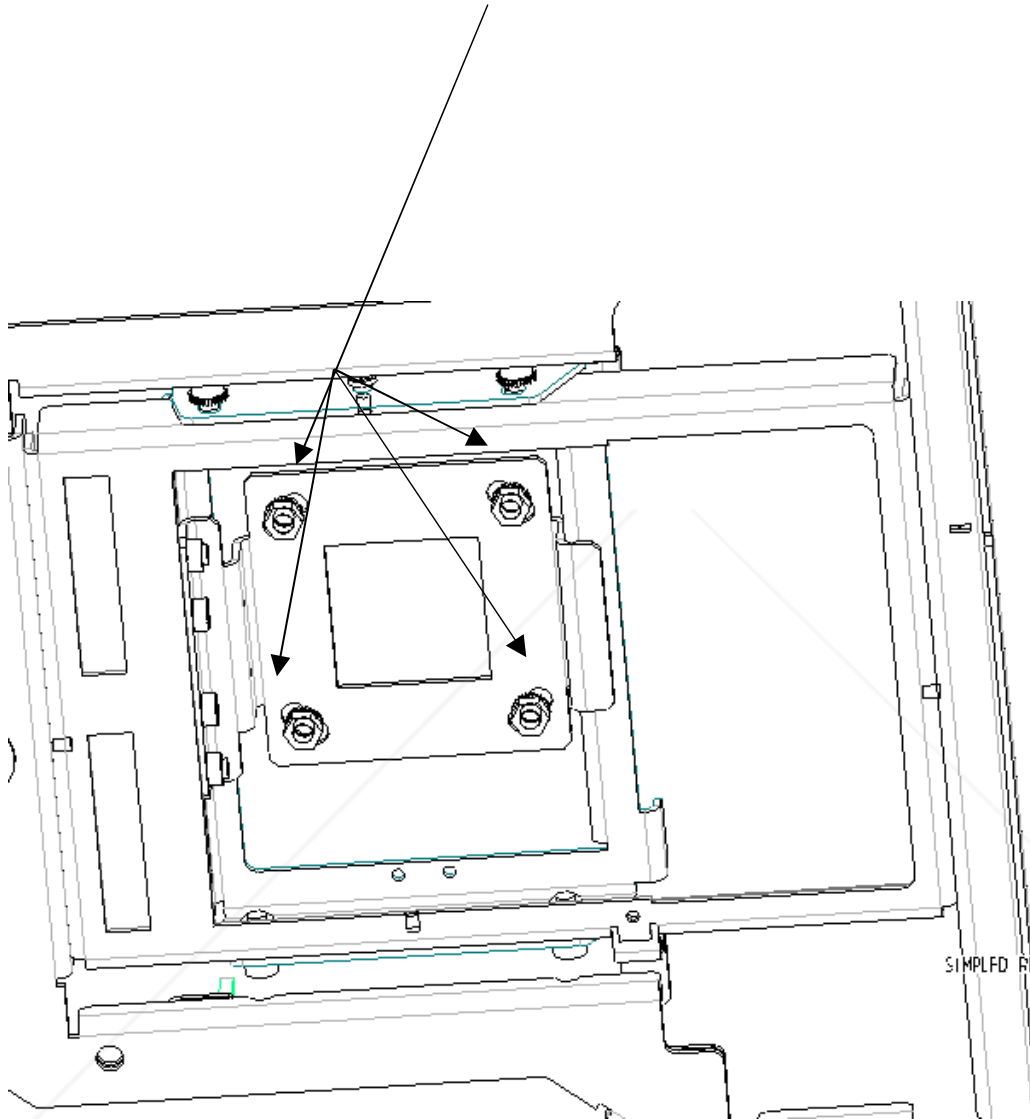

Projector preparation:

1. Turn the projector to its back and remove the Feet assembly. Unscrew 3 Plastic feet and remove their X head M8 screws. Discard 3 plastic feet r722567 and x head M8 screw.

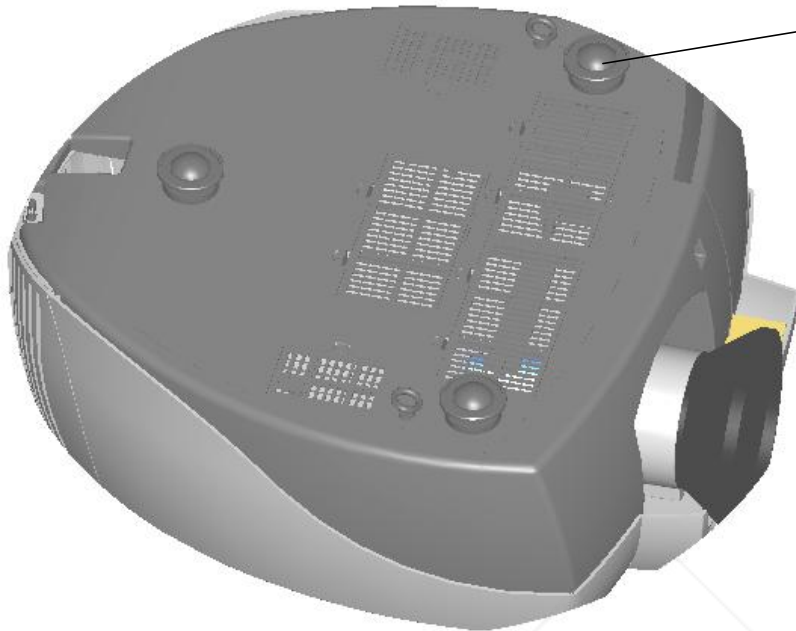


R722567, M8
SCREW,
SPRING WASHER
& FEET SUPPORT
r818903.

2. Fix the feet support, spring washer and Spacer M8 bolt as shown below. For alignment of the Centre distance between the feet, fix the ceiling mount and then tight the spacer M8. Remove the Ceiling mount and fix it on the Ceiling.



Feet Support
R818903, Spring
Washer , Spacer M8
R826744 and Flange
Nut M8


3. Lift and slide the projector assembly into the Ceiling mount. The projector will be located precisely into the ceiling mount base plate after the tightening of 3 M 8 flange Nuts.

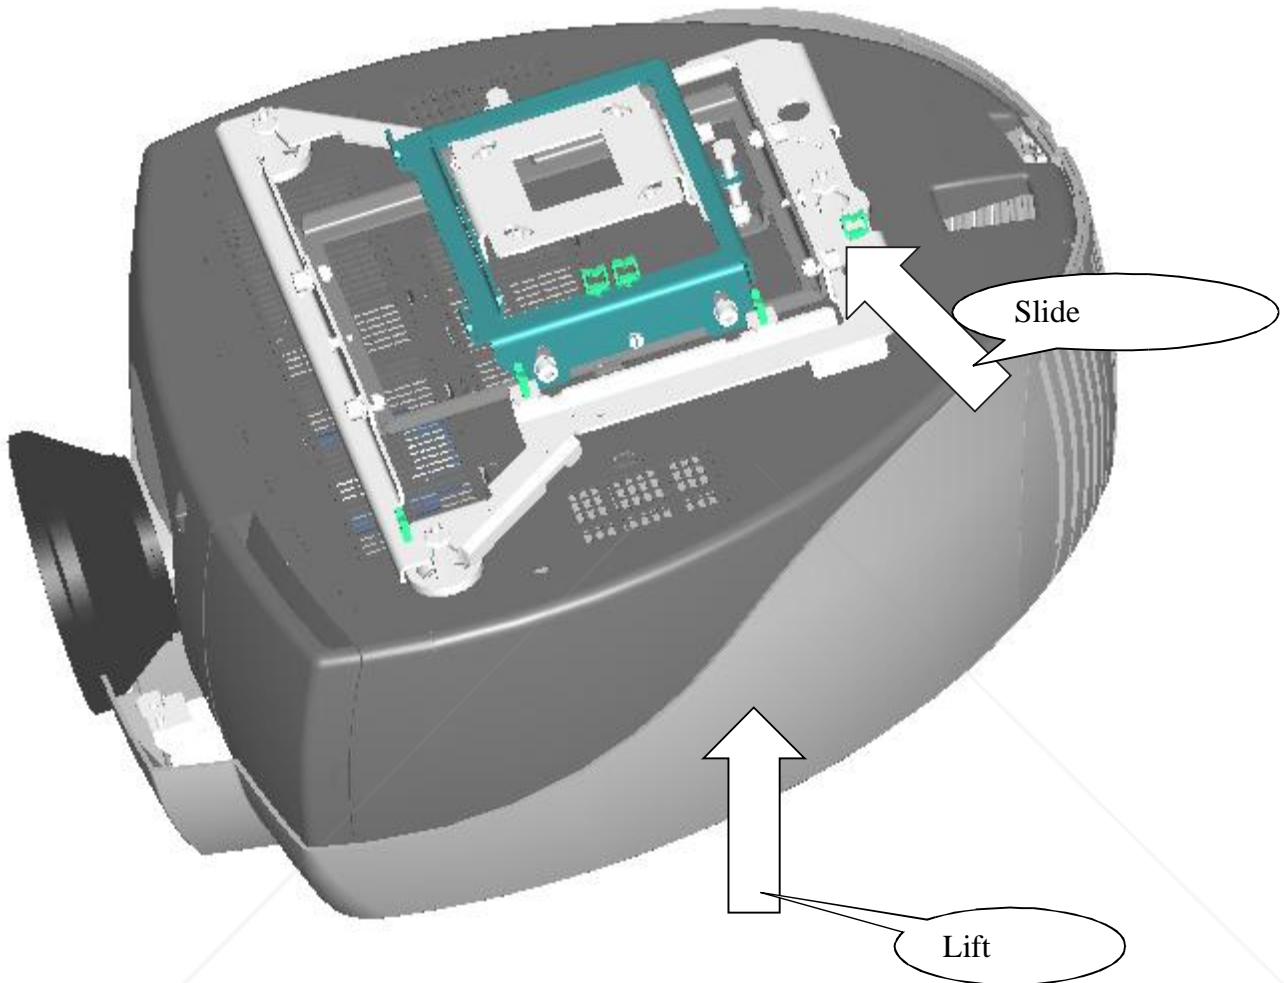

4. Route the Signal cable (RGBHV or Deserialiser) and Power cord into the cable saddles.

5. Fix the one end of safety chain into the projector's Eye bolt and the other end to the firm place in the Ceiling.

Adjustments: Following adjustment can be done in random order.

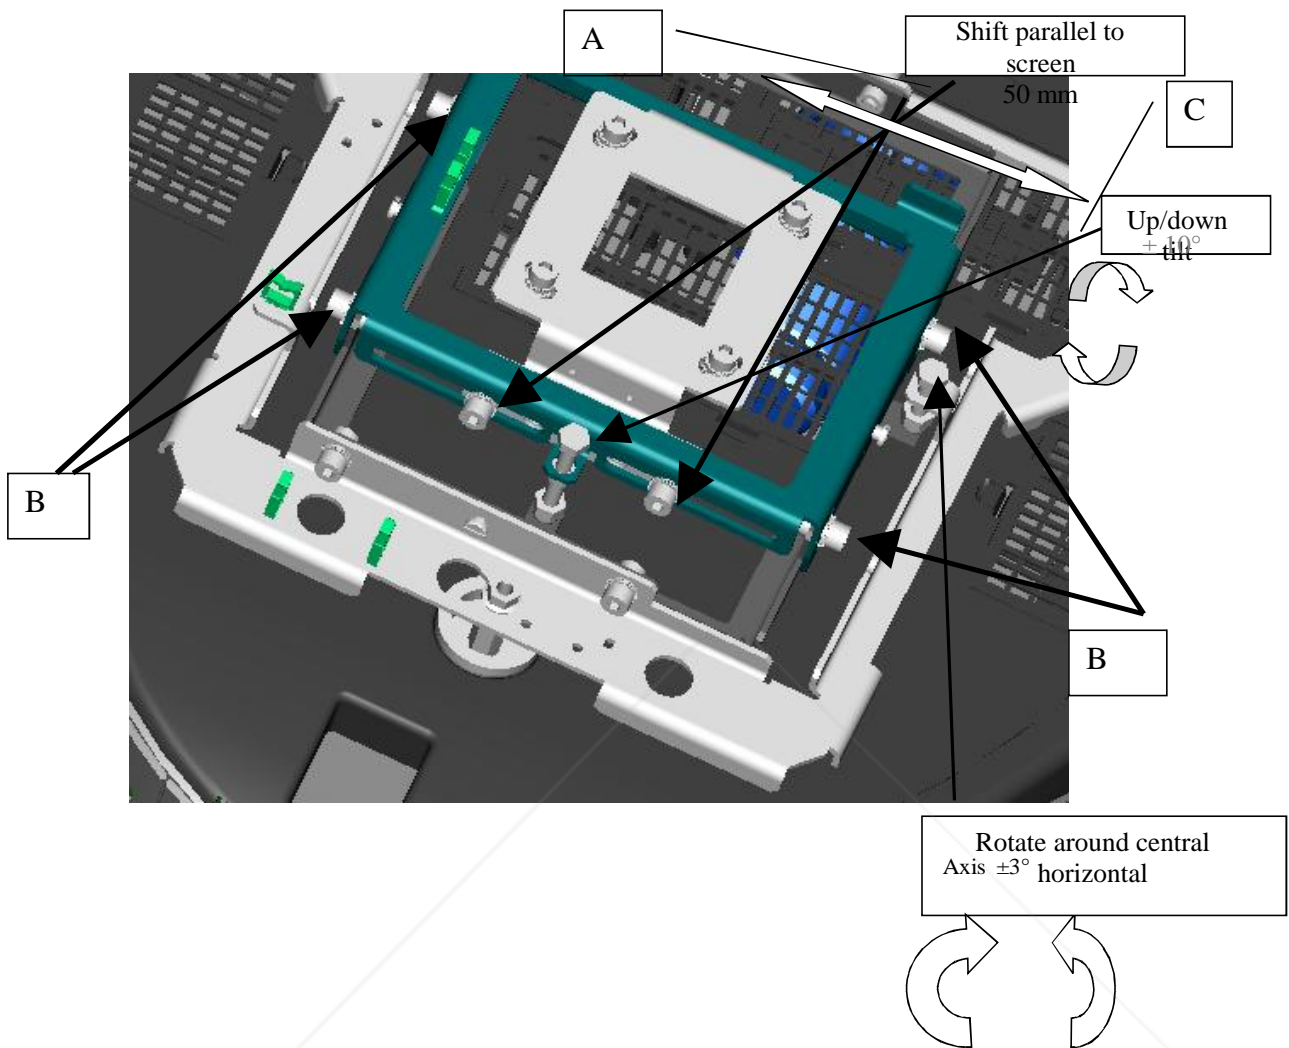


1. Shift parallel to the screen:

Loosen the 2 bolts A and move the projector till the projector is aligned. Tighten these 2 bolts to secure the position.

2. Up down Tilt :

Loosen the 4 bolts B . Adjust the updown tilt precisely by moving bolt C clockwise or anti clockwise. Tighten the 4 bolts B to secure the position.

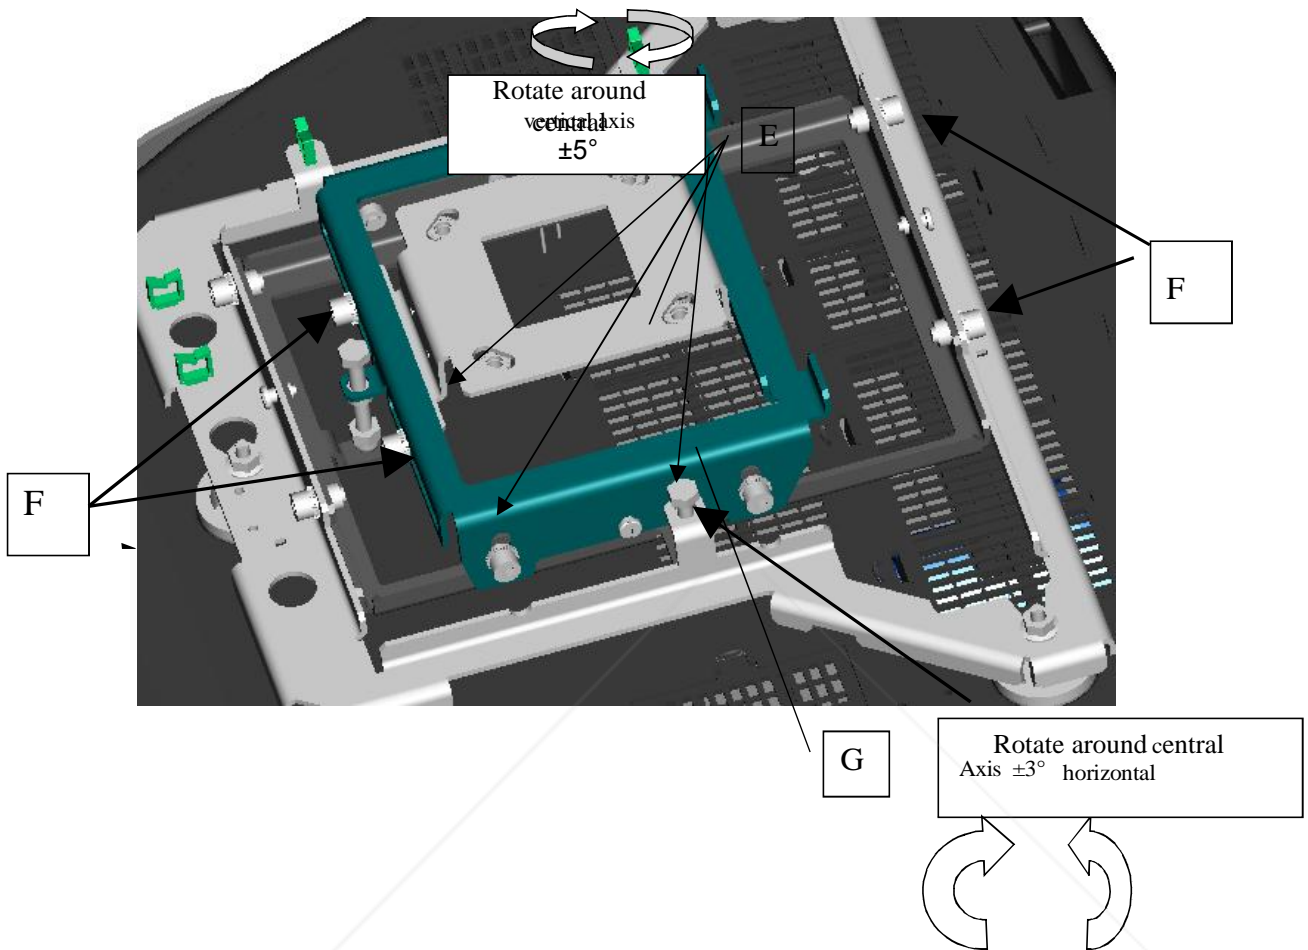

3. Rotate around central Vertical axis:


Loosen the 4 bolts E . Rotate/adjust the projector clockwise or anti clockwise. Tighten the 4 bolts E to secure the position.

4. Rotate around central Horizontal axis:



Loosen the 4 bolts F . Adjust the motion precisely by moving bolt G clockwise or anti clockwise. Tighten the 4 bolts F to secure the position.

Mounting the bar with Cable Cover assembly:

1. Unscrew the 2 bolts J and slide out the upper part of the Bar. Pass the cable cover into the upper part of the Bar.

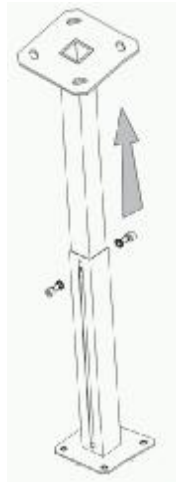

2. Slide the horizontal shift plate R 826743 into the lower part of the Bar. Fix with 4 M8 bolt K.
3. Slide the upper bar into the lower bar assembly. Remount the 2 previously removed bolt J. Adjust the height to minimum.

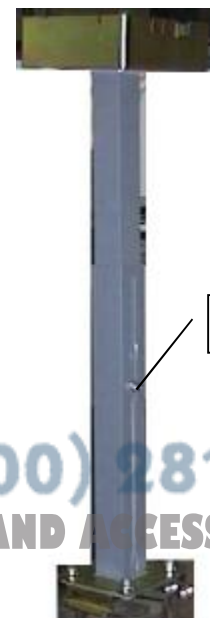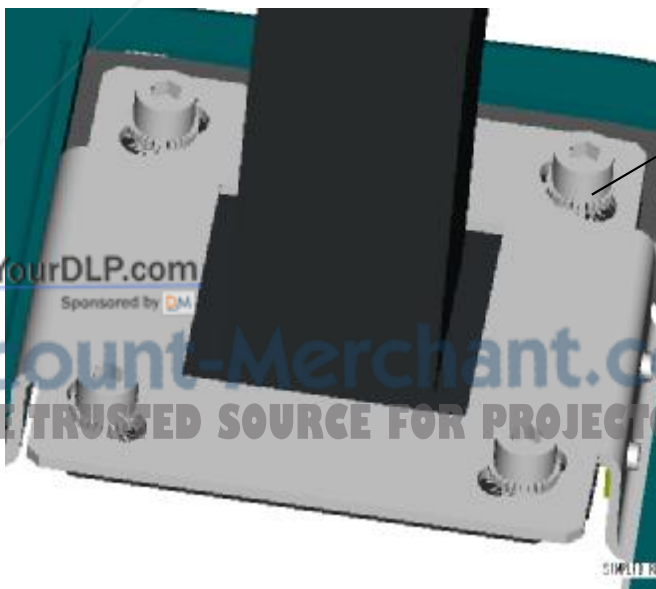

4. Routing the Cables:

- a. **RGBHV cable preparation:** With the help of PVC tape arrange the connectors in series. Pass the cable RGBHV , Deserialiser and power cord into cable guide R826761




- b. Pass the RGBHV cable into the IQ bar assembly from top side. Take out the BNC connector one by one from bottom side.



- c. Pass the power cord and deserialiser cable one by one.



- d. Pass all the cables one by one from cable guide R 826745 and fix the cable guide on to the hor shift plate using 2 M3 Screws L.

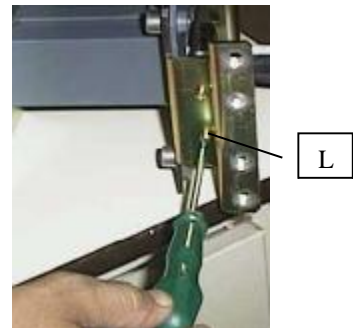

The cable routing through IQ bar is complete. Adjust the approximate height of the IQ bar and also adjust the length of the cable required at the projector side.


5. Mount the Ceiling Bracket R 826748 on to the ceiling with standard M8 bolt not supplied with the Kit. For marking of the ceiling holes, refer the Installation manual of the Ceiling Mount of CV 120.




6. Hang on the IQ bar and cable routed assembly. Fix with 4 M8 bolt along with washer M.



7. Mount the Ceiling mount assembly on to the horizontal shift plate by twisting and then lifting up. Fix the 2 M8 Bolt A.

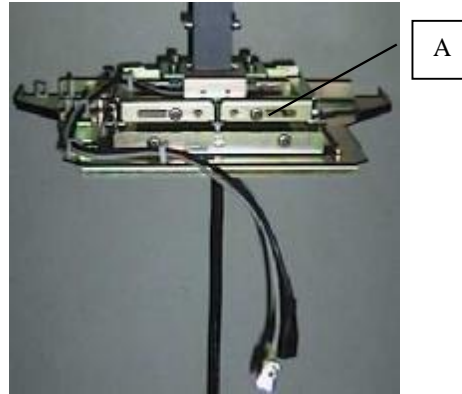


8. Route the deserialiser cable and the power cord to the back and RGB cable to the front.

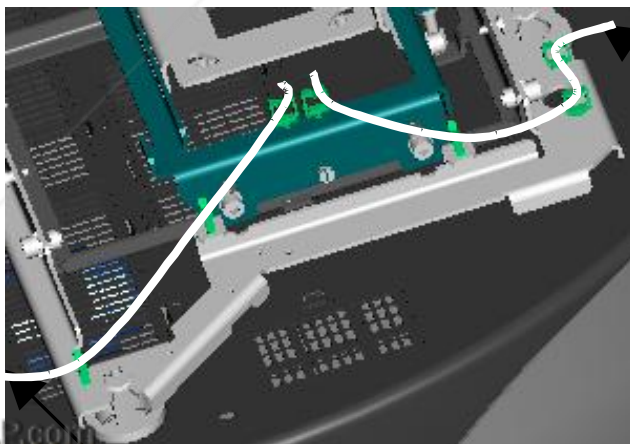

Power cord &
Deserialiser cable

RGB Cable

There is also an option to route the cable from inside the Ceiling mount using cable ties and guiding holes on the Ceiling mount base as shown below.

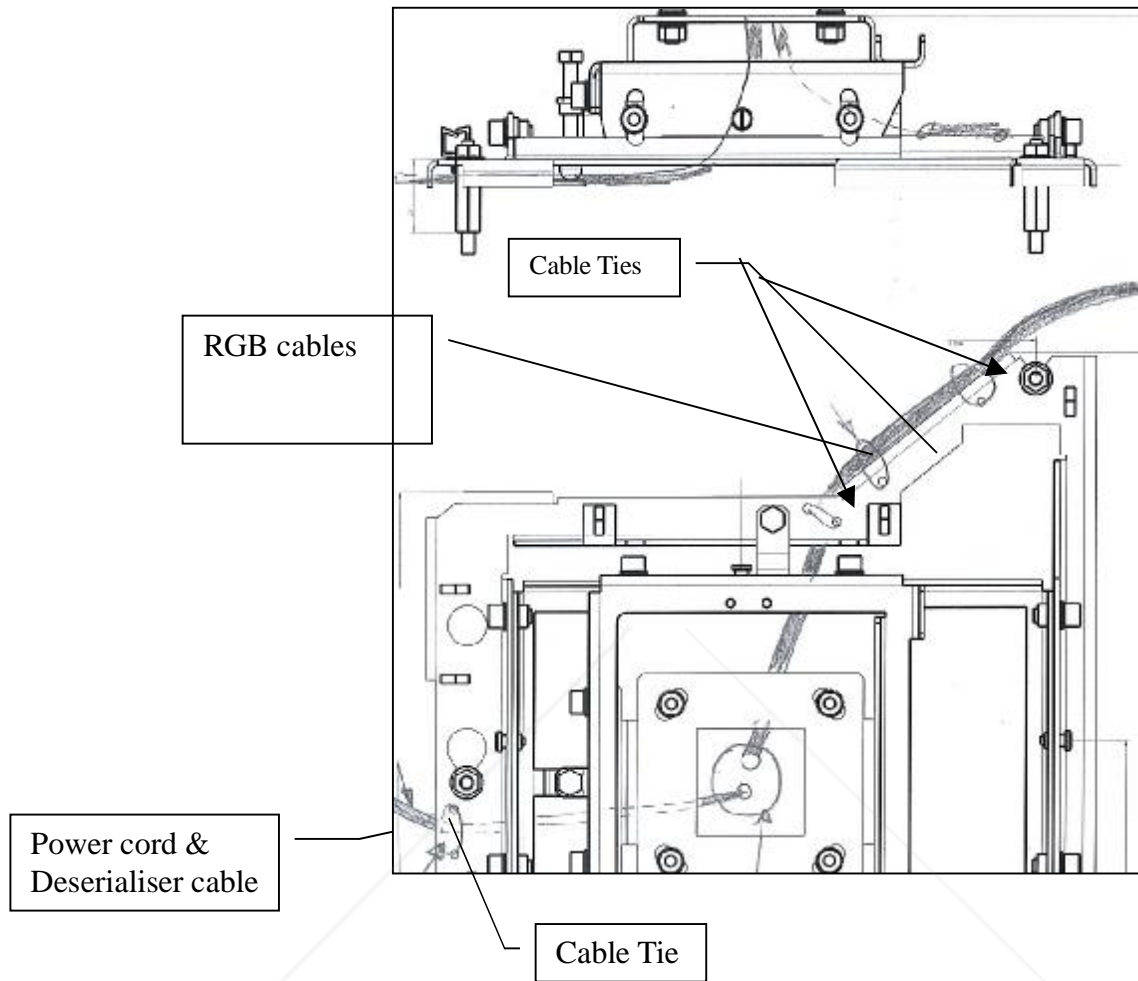


Break the cable guide grooves on the cable cover as per the direction and location of the input cables and power cord at customer site/room. Lift the cable cover and fix with the help 4 M3 screws N.



9. The adjustment procedure for the rotation around central vertical axis can also be done as explained below.

Loosen the 4 M3 screws N of cable cover and slide it down word. Loosen the 4 bolts O. Rotate /adjust the projector clockwise or anti clockwise. Tighten the 4 bolts O to secure the position. Slide up the cable cover and fix 4 M3 screws N.

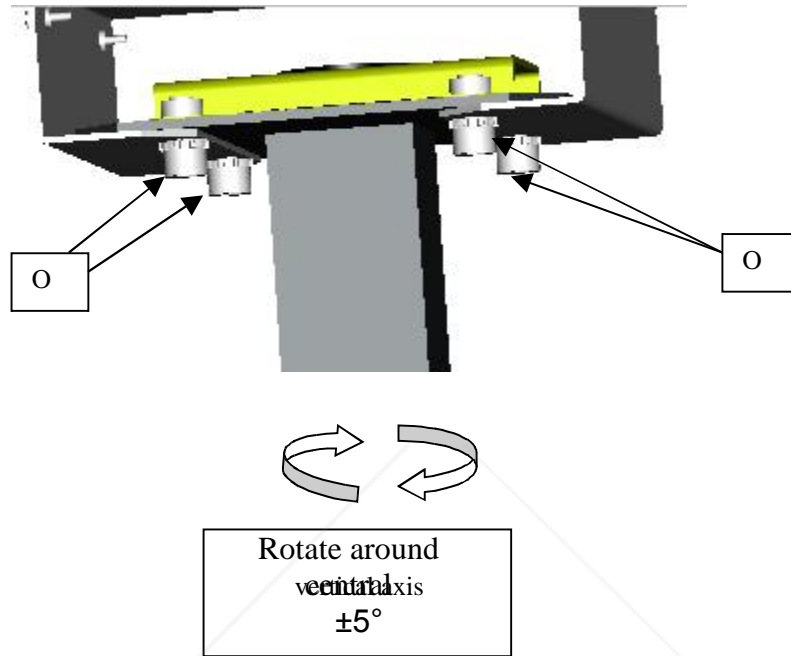

10. Fix the one end of safety chain into the projector's Eye bolt and the other end to the firm place in the Ceiling.



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



FixYourDLP.com

Sponsored by 