

**Installation and Operating Guide | Warranty**

Machine Numbers | D60WLCD





**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:**

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:**

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**POWER CORD POLARIZATION:**

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

**NOTE TO CABLE/TV INSTALLER:**

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

**REGULATORY INFORMATION:**

This equipment, trade name Zenith, model number, D60WLCD, has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The responsible party for this device compliance is:

Zenith Electronics Corporation  
2000 Millbrook Drive  
Lincolnshire, IL 60069

**Digital TV Hotline:**  
**1-847-391-7000**

**CAUTION:**

Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product.

©2001 Zenith Electronics Corporation. All rights reserved.

VCR is required for recording.

# IMPORTANT SAFETY INSTRUCTIONS

## Important safeguards for you and your new product

Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference.

Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product.

This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association.

### 1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

### 2. Follow Instructions

All operating and use instructions should be followed.

### 3. Retain Instructions

The safety and operating instructions should be retained for future reference.

### 4. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

### 5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

### 6. Water and Moisture

Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

### 7. Accessories Carts and Stands

Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

### 8. Transporting Product

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



PORTABLE CART WARNING

### 9. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

### 10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

### 11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

### 12. Power-Cord Polarization

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

### 13. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

(Continued on next page)


# IMPORTANT SAFETY INSTRUCTIONS

(Continued from previous page)

## 14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/ NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### Example of Grounding According to National Electrical Code Instructions

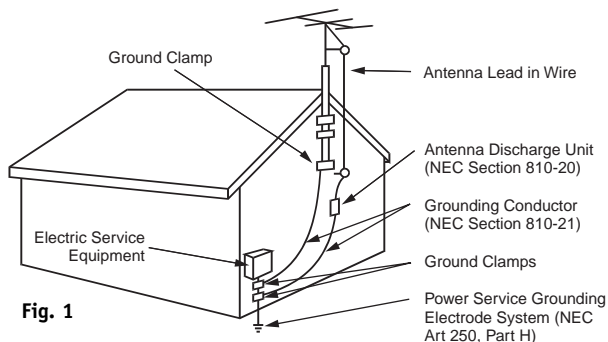

## 15. Lightning

For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

## 16. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## 17. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 18. Object and Liquid Entry

Never push objects of any kind into this product through

openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

## 19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- If the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance.

## 21. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

## 22. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 23. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product.


## 24. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## EZ Help

The EZ Help feature is created to let you understand each function of the Menu and Program in an easy and convenient way. When you navigate through the Menu, press and hold the HELP (?) button on your remote control if you want to know about the highlighted item. Information about the highlighted item will be displayed on the right part of the TV screen.

Simply press and hold to see the helpful information.

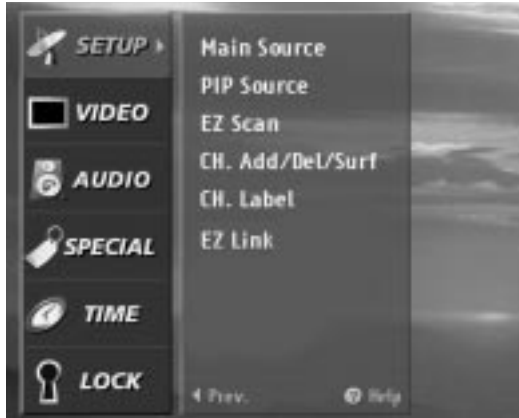

Menu

### NOTE :


The **HELP (?)** button on the remote control can be used in two ways. You can press the **HELP (?)** button independently to display the EZ HELP feature. However, when the **MENU** is already displayed, you can press the **HELP (?)** to show the EZ HELP feature.

The EZ Help feature:

1. Press the **HELP (?)** button on the remote control to display the EZ Help screen.
2. Scroll up and down to select EZ Help menu items by using “▲▼” on the thumbstick of the remote control.
3. Move the highlight by using “▲▼◀▶” on the thumbstick. The explanations of the highlighted item will be displayed on the right side or at the bottom of the screen.
4. Press the **EXIT** button on the remote control if you want to return to TV viewing.

## Status indicators

Lamp indicator, operation indicator and temperature indicator at front button of the LCD projection TV show the user the operating status of the LCD projection TV.

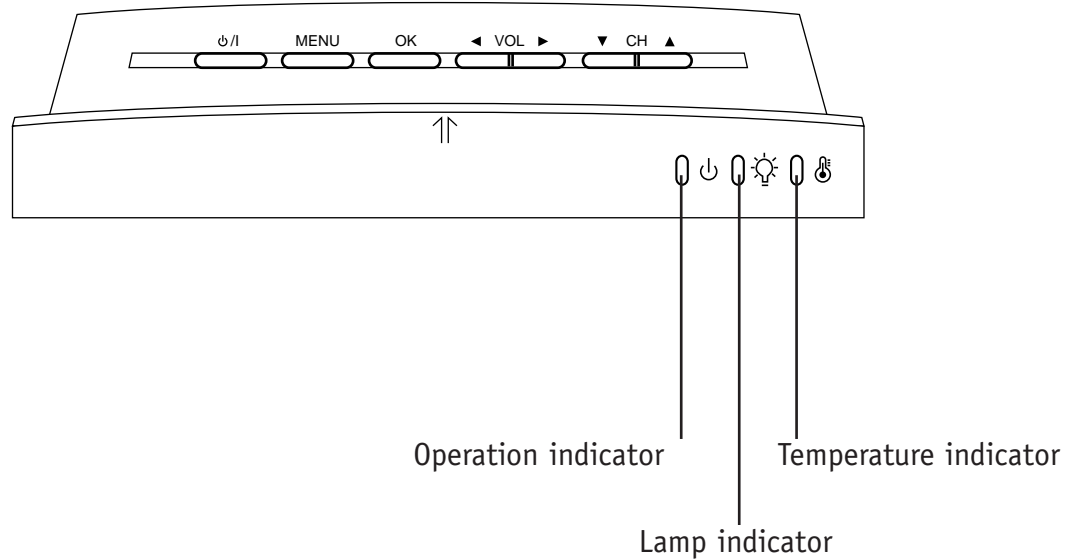


Operation Indicator	Off	Power off.
	Orange	Indicator Standby.
	Green	On operation.
	Green(flashing)	Preparing operation in standby.
Lamp Indicator	Orange needs	Projection lamp is reaching the end of its life and to be replaced with a new lamp.
	Red replaced	Projection lamp run out of its life and needs to be with a new lamp.
	Red(flashing)	The projection has trouble in the lamp or around it. Contact the service center.
	Green(flashing)	The lamp cover is not closed.
Temperature Indicator	Orange	This projection is in high temperature.
	Red	The projection is turned off as its high temperature.
	Red(flashing)	Power is turned off as the trouble of cooling fan.

## Table of Contents

Safety Warnings . . . . .	2	<b>VIDEO Menu</b> . . . . .	30-31
Important Safety Instructions . . . . .	3	<b>AUDIO Menu</b> . . . . .	32-33
EZ Help . . . . .	5	<b>SPECIAL Menu</b>	
Status indicators . . . . .	6	Aspect Ratio . . . . .	34
<b>Step 1. Hook Up TV</b>		On-Screen Language . . . . .	35
Rear Jack Panel . . . . .	8	Captions/Text . . . . .	36
Front Jack Panel . . . . .	9	EZ Demo . . . . .	37
ANT/CABLE Hookup . . . . .	10	<b>TIME Menu</b>	
CABLE BOX . . . . .	11	Auto Clock . . . . .	38
VCR + CABLE BOX . . . . .	12	Manual Clock . . . . .	39
DVD . . . . .	13	On Time . . . . .	40
HD-SET TOP and PC Hookup . . . . .	14	Off Time . . . . .	41
External Stereo . . . . .	15	Sleep Timer . . . . .	42
Room Setups for Home Theater . . . . .	16	<b>LOCK Menu</b>	
Monitor Out . . . . .	17	Parental Lock . . . . .	43-45
Remote Button Functions . . . . .	18-19	Programming the Remote . . . . .	46
On-Screen Display . . . . .	20	Programming Codes . . . . .	47-50
Front Panel Controls . . . . .	21	Maintenance . . . . .	51-52
<b>Step 2. Customize your TV's Features</b>		Troubleshooting . . . . .	53-54
<b>SETUP Menu</b>		Glossary . . . . .	55-56
Main Source . . . . .	22	Product Specifications . . . . .	57
PIP Source . . . . .	23		
PIP/POP/SPLIT . . . . .	24-25		
EZ Scan . . . . .	26		
Channel Add/Del/Surf . . . . .	27		
Channel Label . . . . .	28		
EZ Link . . . . .	29		

# Rear Audio/Video Jacks

Connecting cables to your Entertainment Machine.

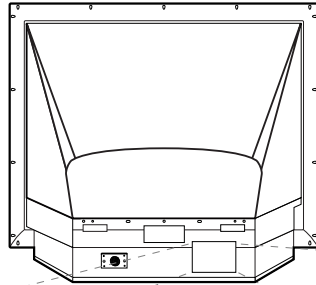

**RF Connectors: Antenna/Cable 1, Antenna/Cable 2, and Loop Out**  
Used to connect analog cable or antenna signals to the television, either directly or through your cable box.

**PC and HD-STB Input**  
Used to connect from an PC source or HD-STB Satellite system.

**PC and HD-STB Audio Input**  
Used in audio connections from an PC source or HD-STB Satellite system.

**Variable Audio Out**  
Used to connect either an external amplifier, or add a sub-woofer to your surround sound system.

**Left/Right Audio**  
Used for stereo sound from various types of equipment.

**Y, Pb, Pr DVD Component Video and HD Component Video**  
Some top-of-the-line DVD players use what is called "component video," for extremely accurate picture reproduction. Refer to your DVD manual for further information.


**Center Mode IN**  
Connect to external Dolby Digital Center "preamp output."

**Monitor Out**  
Connects to a second TV or Monitor.

**Left/Right Audio**  
Used for stereo sound from various types of equipment.

**Video 1 or 2**  
Connects the video signals from various types of equipment.

**S-VIDEO In**  
A connection available with some high-end equipment that provides even better picture quality for Video 1.

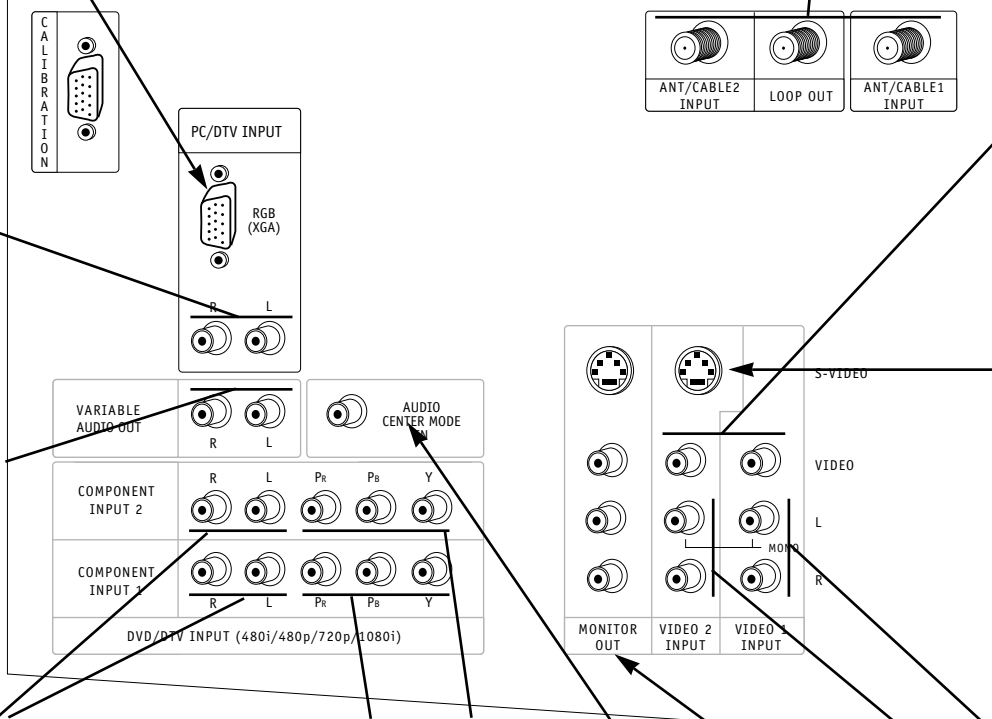

## Mini glossary

- JACK** A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jack and the Audio/Video jacks that are color-coded.
- SIGNAL** Picture and sound traveling through cable, or on the air, to your television screen.




## Front Audio/Video Jacks

There are four jacks on the right side of your Entertainment Machine that make connecting Audio/Video devices like video games and camcorders very simple.

The jacks are like those found in the jack pack on the back of your Entertainment Machine. This means that most equipment that connects to those types of jacks in the rear jack pack, can also be connected in side.

To use the side jacks as the signal source, use the Main Source menu as described on page 22. They will be named "Front Video" in the Main Source menu.

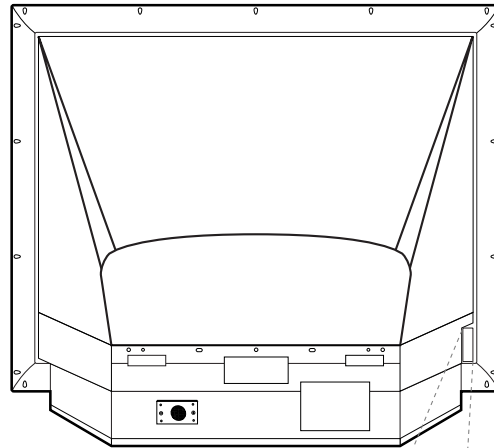

*When you choose Front Video or Front S-Video, the audio is automatically changed as well.*




*If you're connecting a video game unit, make sure to change the picture settings with the EZ Video option in the Video menu (see page 30).*

### Video

Connects the video signals from any piece of equipment.

### Left/Right Audio

Used for stereo sound from various types of equipment.

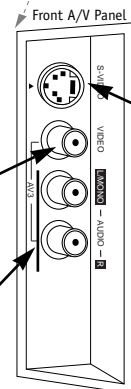

### S-Video

A feature available with some very high-end equipment that provides even better picture quality.

### Mini glossary

**A/V CABLES** Audio/Video cables. Three cable connectors—Right audio (red), Left audio (white), and Video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices.

**A/V DEVICE** Any device that produces video or sound (VCR, DVD, cable box, or television).


## ANT / CABLE Hookup

1

Connect the Entertainment Machine to your antenna as shown.

2

Turn to page 26 to tune your ANT / CABLE antenna.

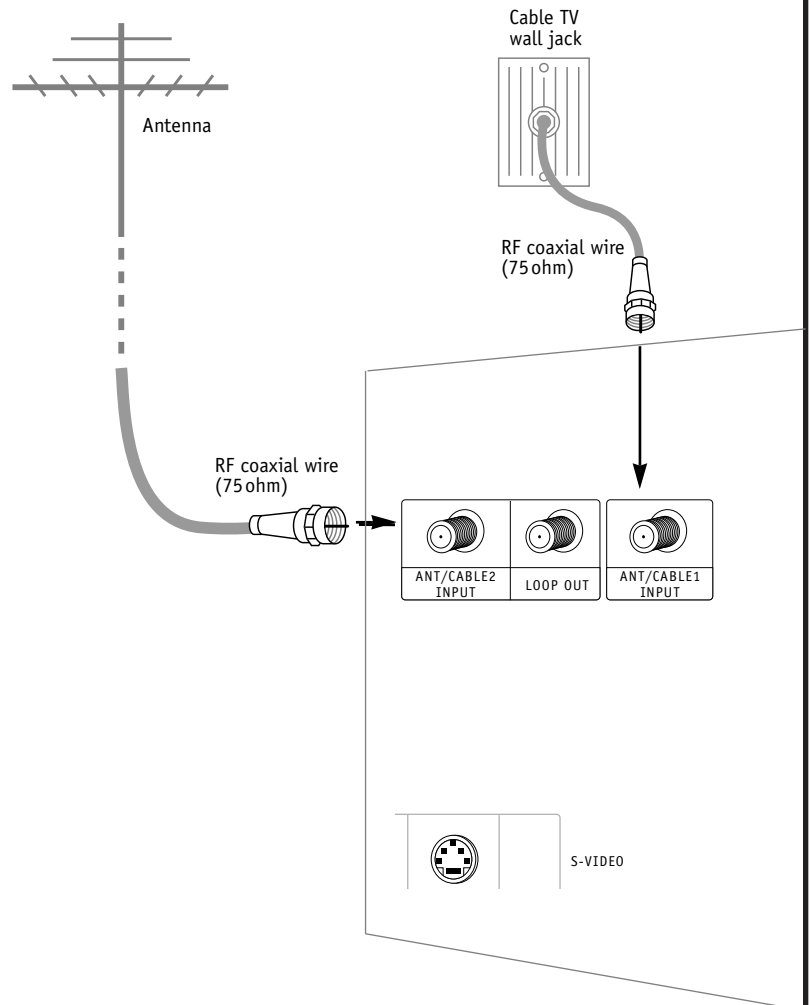

*If you receive your RF signal through an antenna that is several years old and connects with two small prongs, you will need to purchase a 300 to 75 Ohm adapter. It should be available from your local electronics dealer.*

*Zenith recommends using a 75 ohm cable for your antenna connections in order to prevent interference.*


## CABLE BOX

Some cable services require the use of a cable box to decode premium channels and pay-per-view. Using the Loop Out to Decoder option, and programming your remote, you can connect your cable box so that you only need your MBR remote to control all the channels. By connecting cable directly to your Entertainment Machine, then running it out to the cable box and back, you make the cable box another source to choose from in the Source selection on your remote.

- 1** Locate the Antenna/Cable 2 jack on the back of your TV. Connect the cable that runs from the wall directly to the jack. Now find the Loop Out jack.
- 2** Connect the cable from this jack to the Input jack on the back of your cable box.
- 3** Locate the Output jack on the back of your cable box. Connect this to the Antenna/Cable 1 jack on the back of your TV.
- 4** To view the premium stations, press the TV button on your remote and select the other Cable source (Ant/Cable 1). Then set the channel number on your cable box to HBO, CINEMAX, SHOWTIME, etc.

To view the non premium channels press the TV button and select Ant/Cable 2. Then run EZ Scan to check for all available channels and store them in memory.

This can be combined with any other equipment you may want to hook up. Hook cable directly into the TV, then to the cable box. From there, the cable box goes to the next device, down the line, until the last piece, which connects back to the TV in the Antenna/Cable 1 jack.

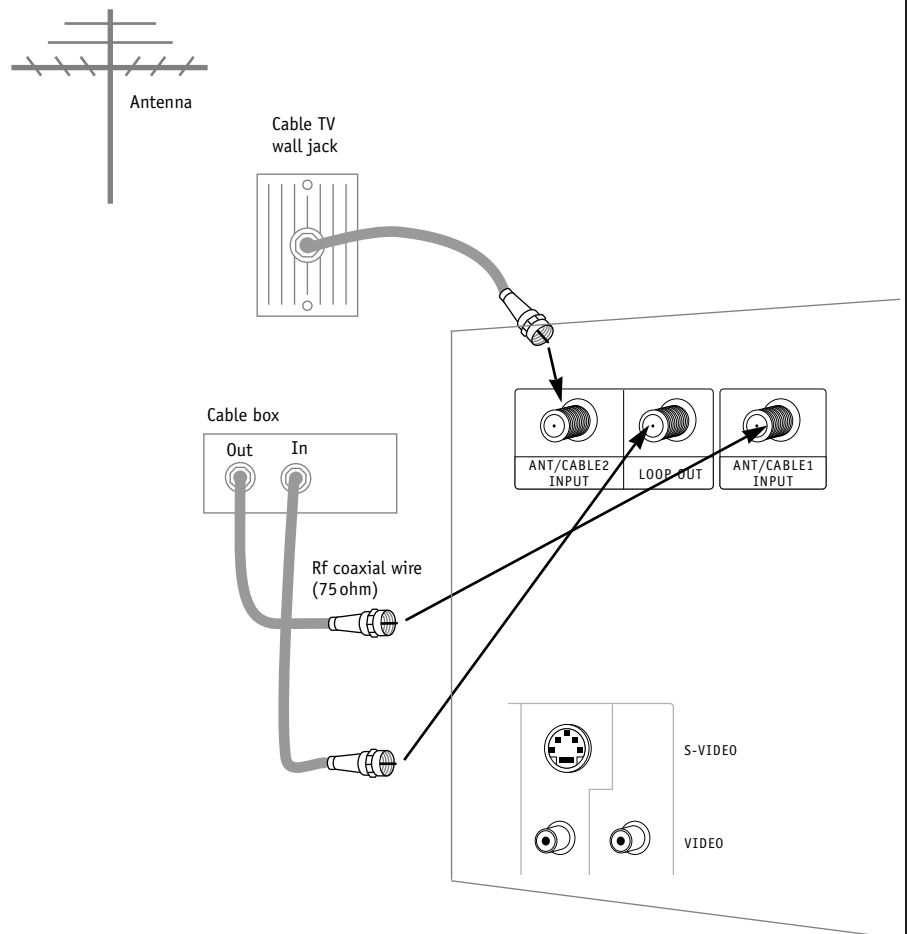

## VCR+CABLE BOX


**1** Locate the Antenna/Cable 2 jack on the back of your TV. Connect the cable that runs from the wall or antenna to the jack.  
Now find the Loop Out jack.

**2** Connect the cable from this jack to the Input jack on the back of your cable box.

**3** Locate the Output jack on the back of your cable box. Connect this to the RF or VHF/UHF/CATV In jack on the back of your VCR.  
If you want to connect VCR with TV directly, Connect the cable from the Loop Out jack to the RF or VHF/UHF/CATV In jack on the back of your VCR.

**4** Find the composite video and audio jacks on the back of your VCR, and connect them following the instructions provided with your equipment.

You may connect either the composite video or the S-Video cables to your Entertainment Machine. (Do not connect BOTH the composite and the S-Video cables. In the event that you connect both composite and the S-Video cables, only the S-Video will work.)

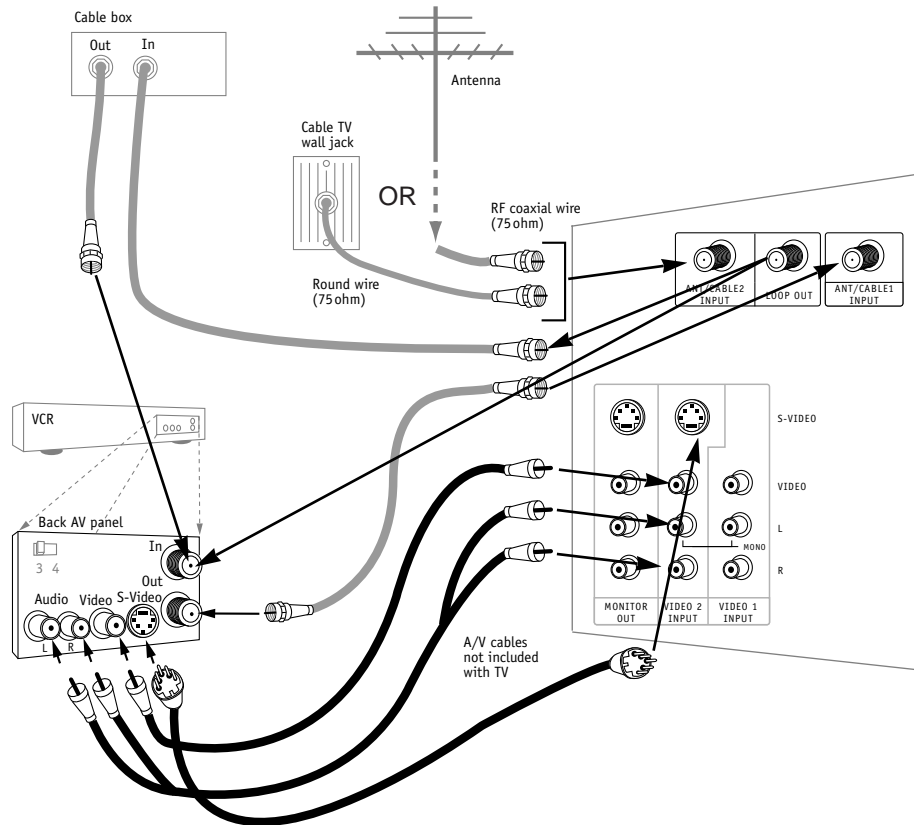

To hear stereo sound from cable or your VCR, you will need to connect A/V cables as well as the wire that runs from the VCR to your Entertainment Machine.



If you want to receive your signals on Channel 3 or 4, locate the Out to TV jack on your VCR. Connect a cable from the Out to TV jack to the Antenna/Cable 1 jack on the back of your Entertainment Machine.




After connecting external equipment to the TV, don't display still word for hours. It may be show the split word.



# DVD Player

1


Find the audio and composite or S-Video jacks on the back of your DVD Player and connect them following the instructions provided with your equipment.

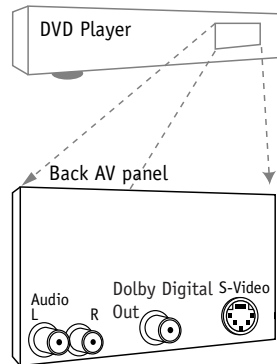

A/V cables not included with TV

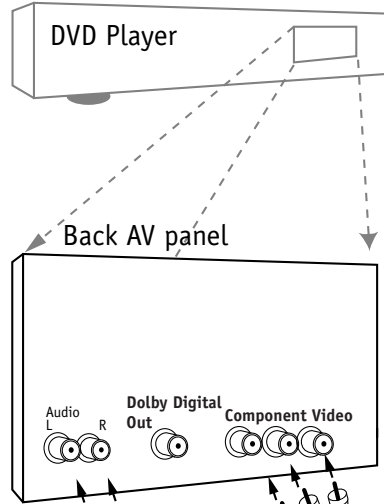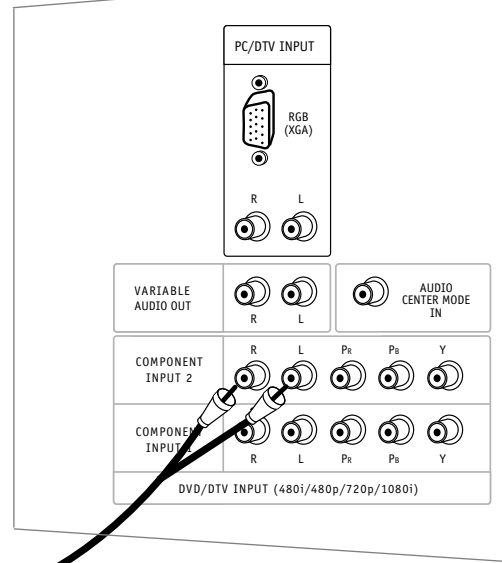

A/V cables not included with TV

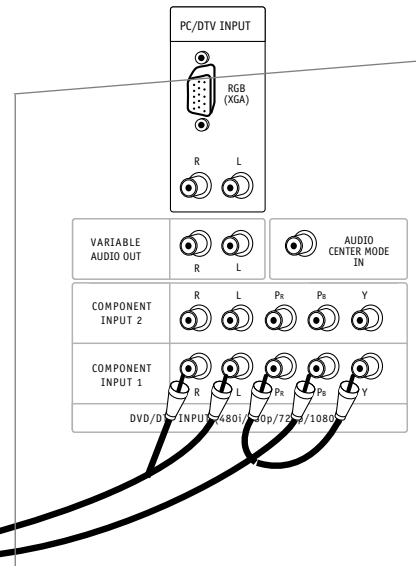

Some high-end DVD players use a picture reproduction system called "component video." If your DVD player has component output, use the connectors marked "COMPONENT INPUT1" on the jack panel. Please refer to your DVD manual for proper installation.

### Mini glossary

**COMPONENT VIDEO** Some video equipment uses three separate lines (Y, Pb, Pr) to more precisely reproduce images. Your manual will explain how this relates to your equipment.


### <Component 1 (or 2) Input>

Y	Pb	Pr
1920X1080i		
1280X720p		
720X480p		
720X480i		

# HD-SET TOP and PC Hookup

**1** Find the audio and VGA jacks on the back of your DBS receiver (or Computer) and connect them following the instructions provided with your equipment.

**2** Connect these cables to your Entertainment Machine as shown.

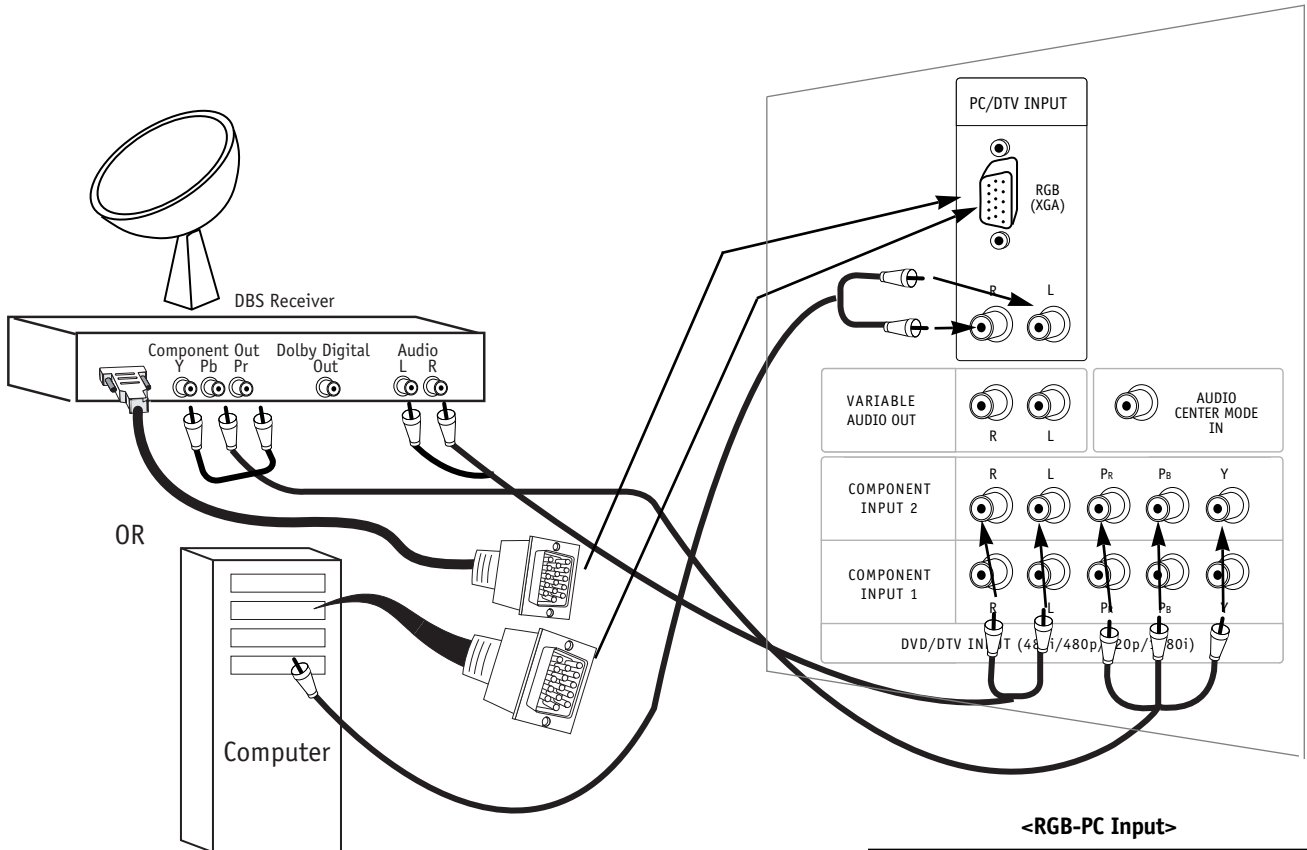

<RGB-PC Input>

MODE	Resolution	Horizontal	Vertical
Text	640x350	31.5KHz	70Hz
	640x480	31.5KHz	60Hz
VGA	640x480	37.9KHz	72Hz
	640x480	37.5KHz	75Hz
SVGA	800x600	35.2KHz	56Hz
	800x600	37.9KHz	60Hz
	800x600	48.1KHz	72Hz
	800x600	46.9KHz	75Hz
XGA	1024x768	48.4KHz	60Hz
	1024x768	56.5KHz	70Hz
	1024x768	60.0KHz	75Hz
Game	720x240	15.7KHz	60Hz



If you select 720p mode of the DTV, you can watch vivid picture.




TO watch the DTV, connect HD-SET TOP to COMPONENT INPUT2 or PC/DTV INPUT of your TV.

## External Stereo

*Hook up Left/Right Front Speaker to Amplifier System.*


- 1** Locate the Variable Audio Out jacks on the back of your Entertainment Machine and the Input jacks on the back of your stereo's amplifier.
- 2** Connect the two jacks, making sure that the right and left channels are placed correctly.
- 3** Set up your speakers through your stereo, according to those directions.

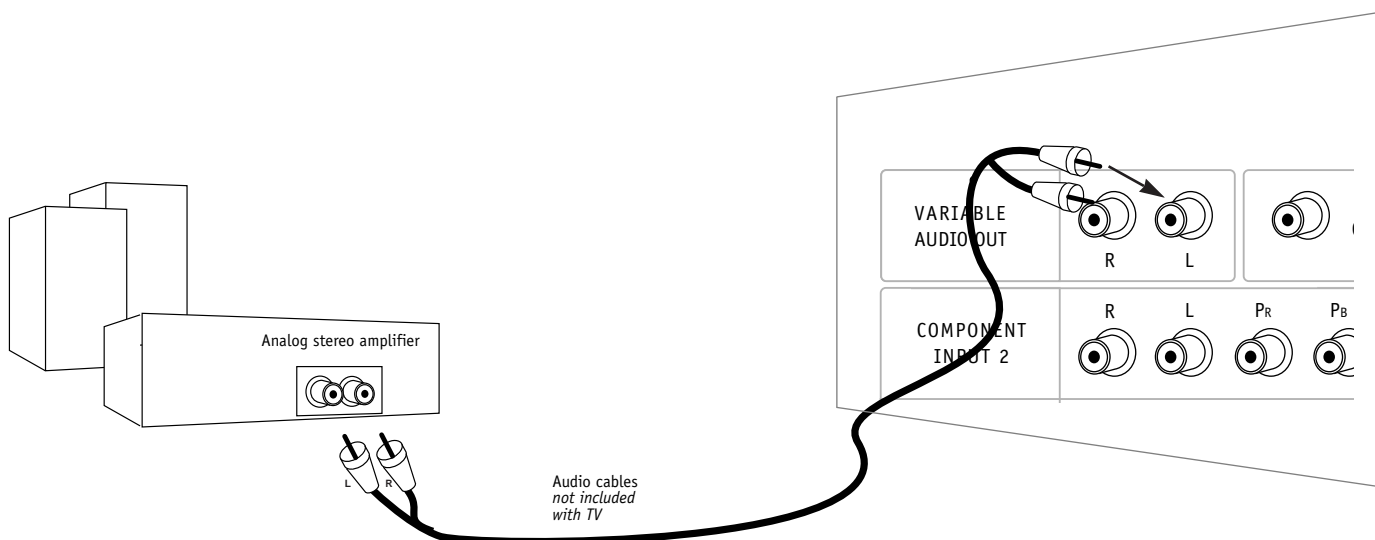

## Room Setups for Home Theater

This is just a general room design. Any number of set-ups are possible, and some changes may be needed to maximize your sound. However, a Dolby Digital Receiver is needed for 5.1 channel audio.

A left and right speaker on either side of the set enhances separation. The Entertainment Machine "center mode in," makes the dialog sound as though it's coming directly from the Entertainment Machine. The rear surround sound speakers provide the majority of other sounds, like those from special effects in movies. Your sub-woofer generates ultra-low frequency sound, for rumbling low-end audio.

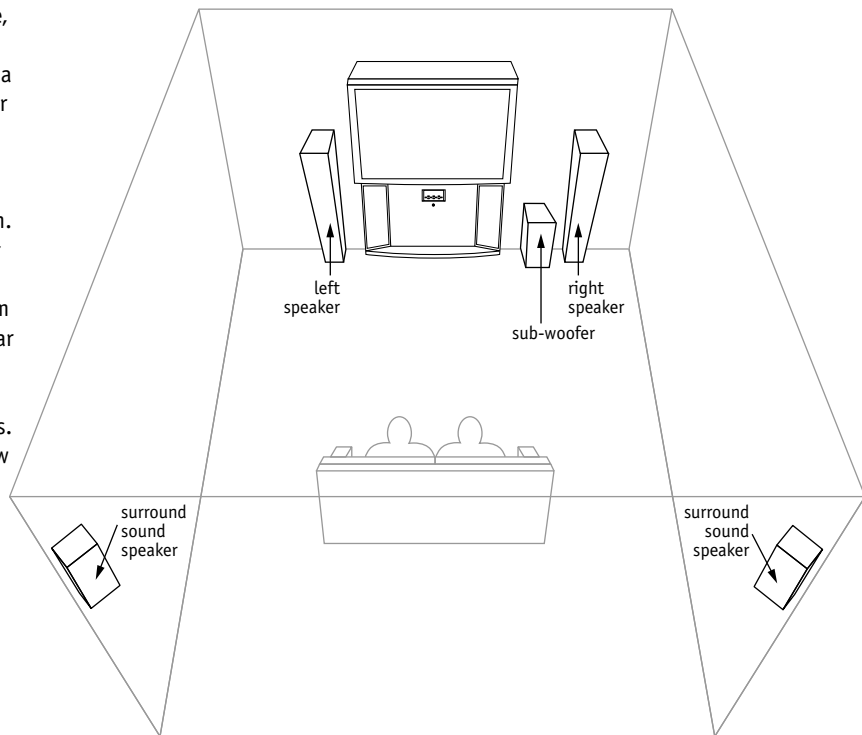

*Sound is affected by speaker placement, so make sure nothing is in front of the speakers, and that they are aimed in appropriate directions.*



*You have the option of turning on or off the internal speakers.*




## Monitor Out

1

Your Entertainment Machine has a special feature which allows you to hook up a second TV or monitor.


2

Just connect the second TV or monitor using the MONITOR OUT Audio/Video jacks located on the back of your Entertainment Machine. See the Operating Manual of the second TV or monitor for further details regarding that device's input settings.

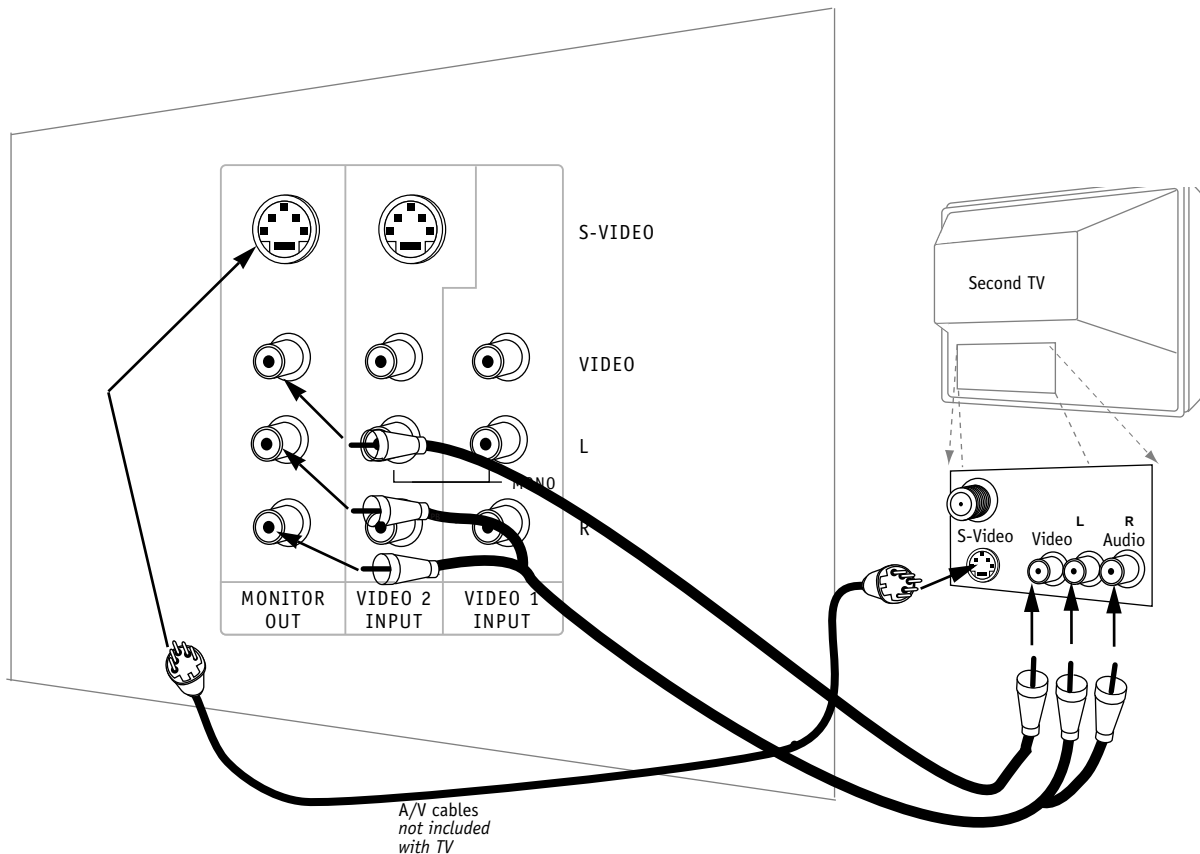


*Component & PC input cannot be output through Monitor Out.*

## Button functions on your Remote

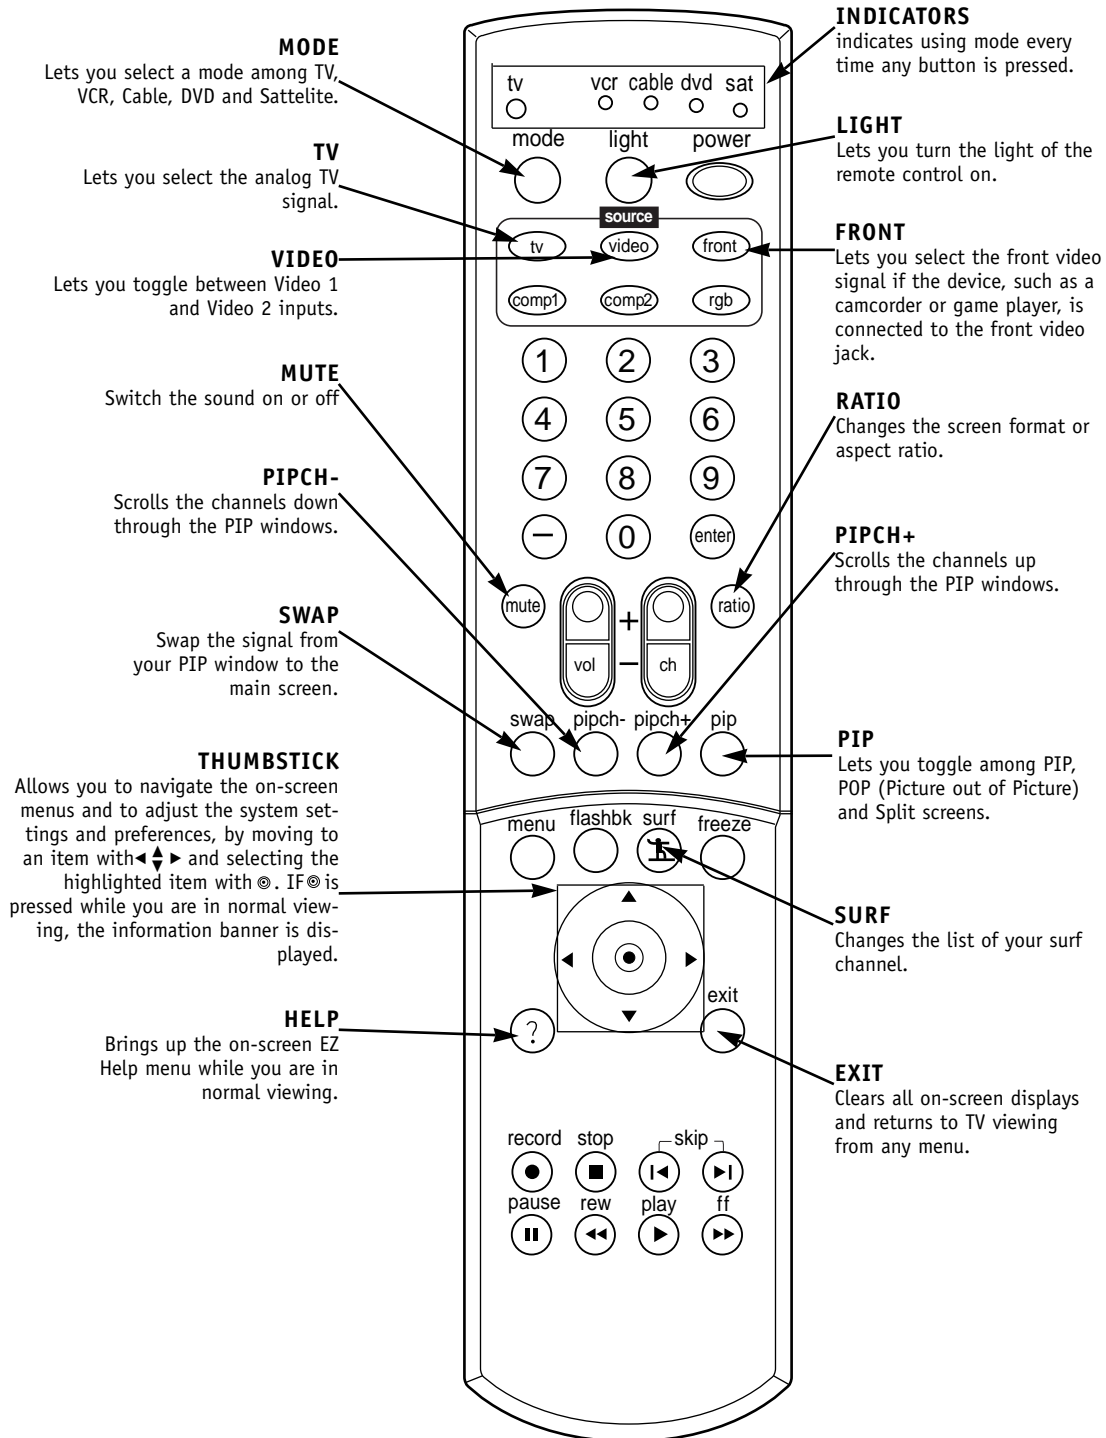


## Button functions on your Remote

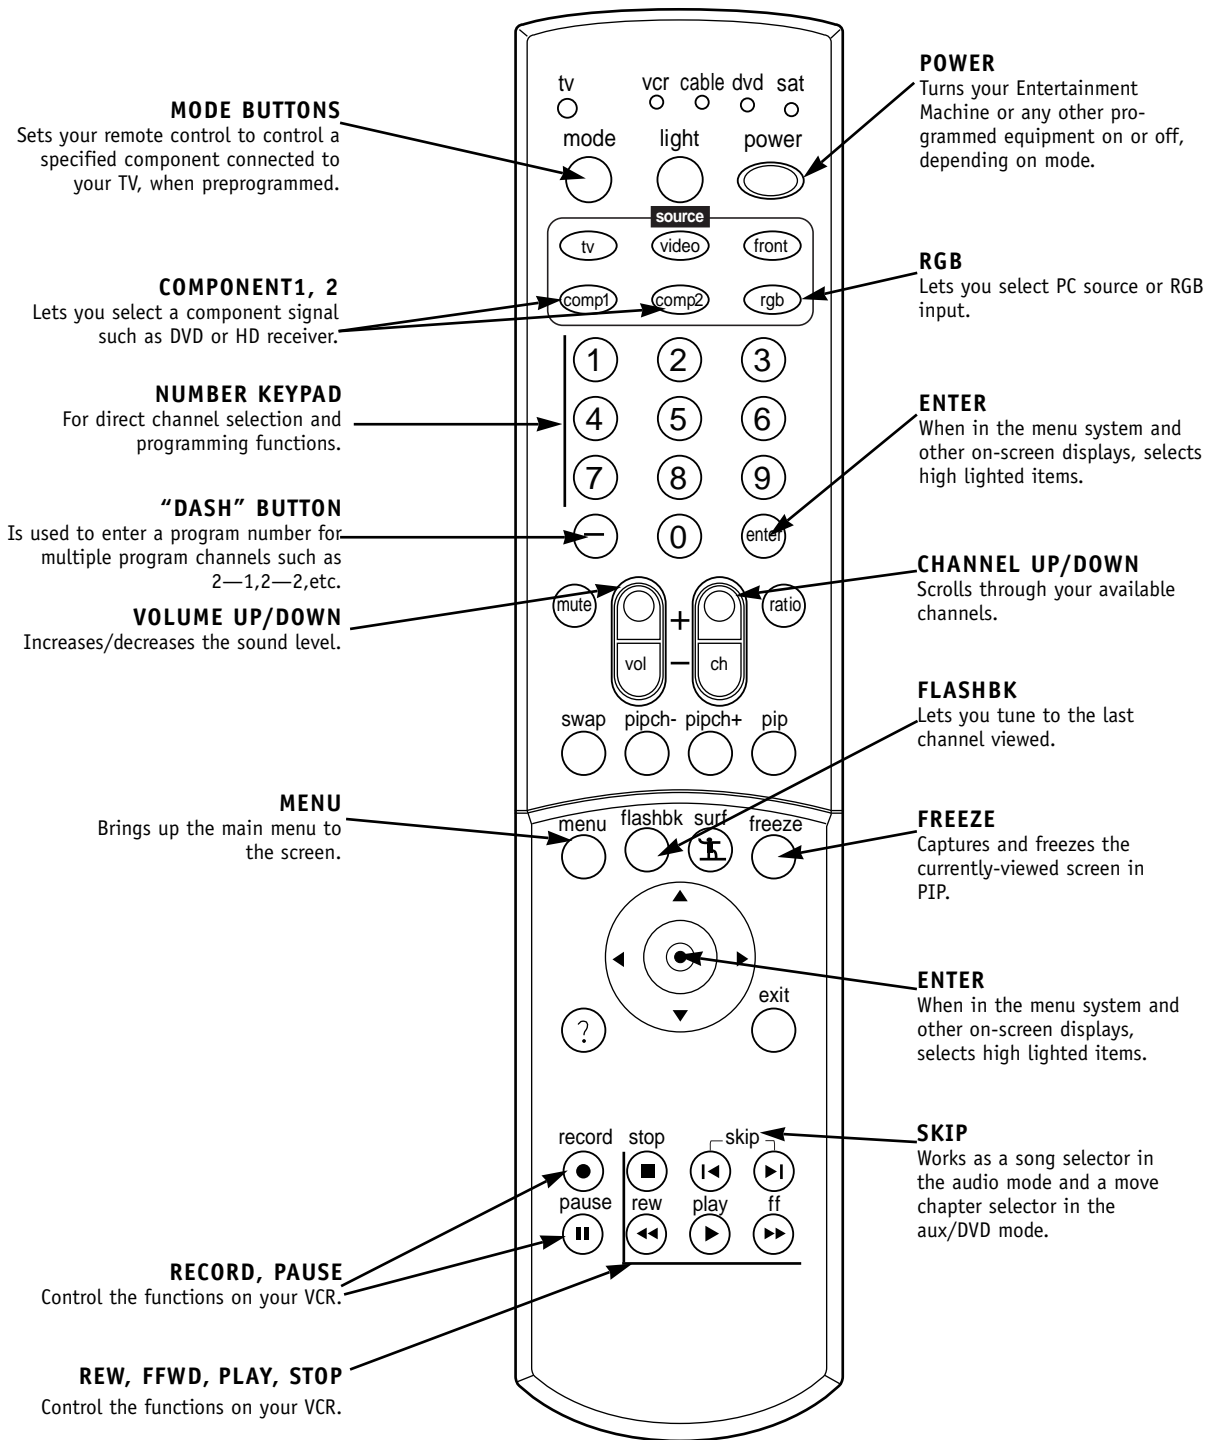


## On-Screen Display


This page describes your on-screen display options.

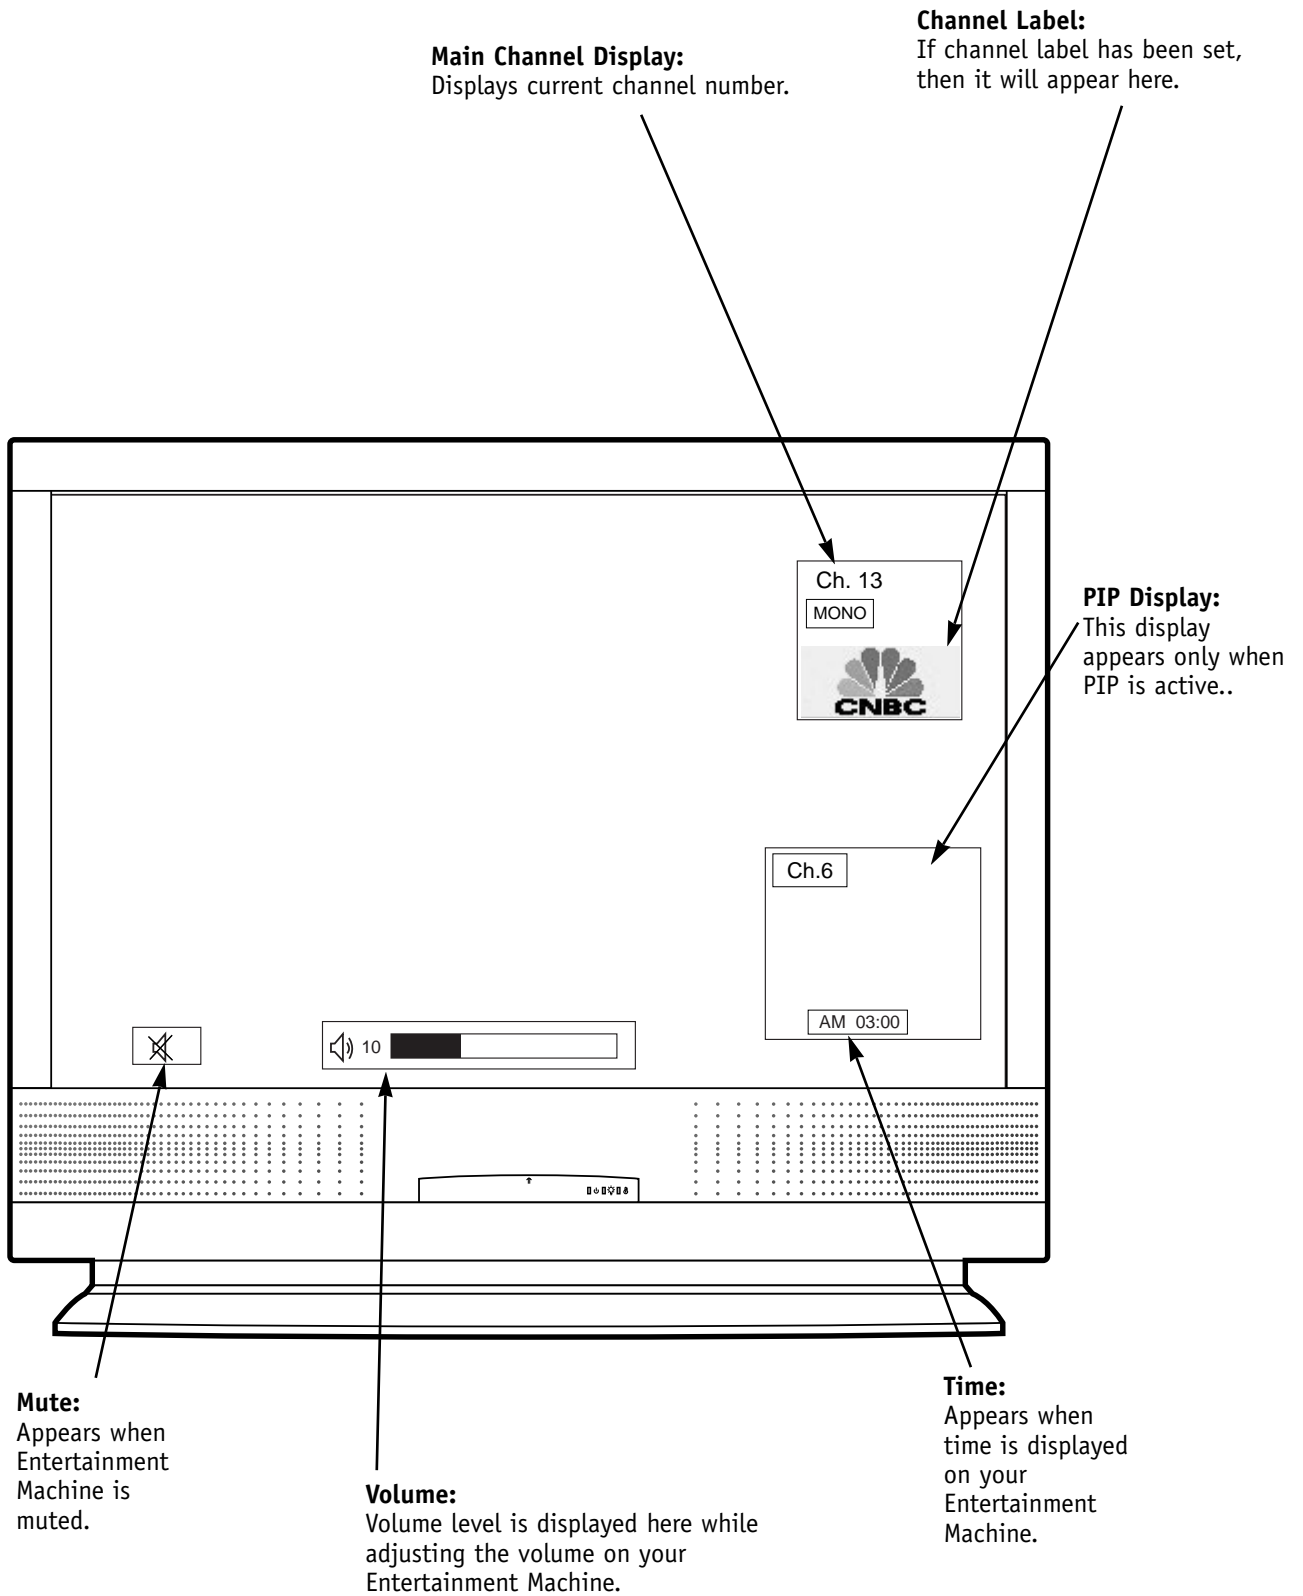


## Front Panel Controls

- 1 Press the  $\phi/I$  button as the power on your remote control.
- 2 To access the Menus, push the Menu button on the panel.
- 3 Press the OK buttons as the ENTER buttons on your remote control.
- 4 Use the vol button as the VOL buttons on your remote control.
- 5 Press the ch buttons as the CH on your remote control.
- 6 This is the operation indicator. (See page 6).
- 7 This is the lamp indicator. (See page 6).
- 8 This is the temperature indicator. (See page 6).

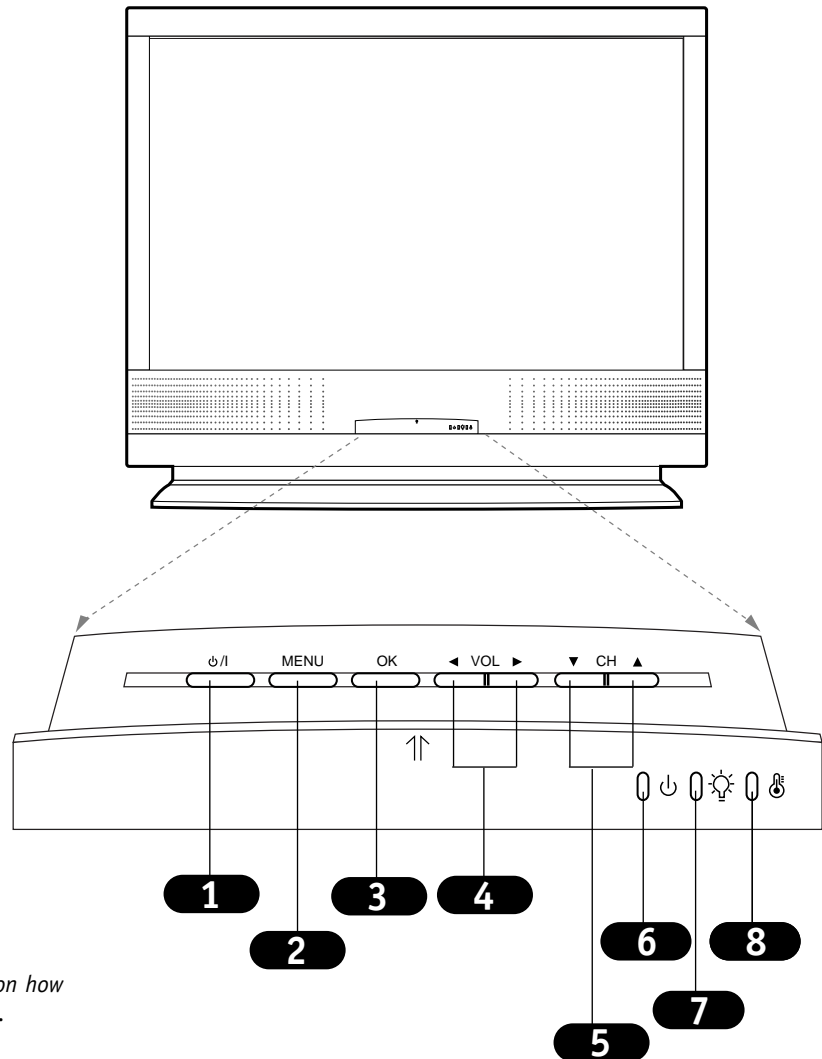


 Refer to the various pages on how to use the on-screen menus.

 The POWER, CHANNEL and VOLUME buttons work just as they do on your remote control.


## Main Source

Changes the screen source for the main screen so you can watch your off-air TV, cable TV, VCR, DVD, or any other devices that you have hooked up to your TV.

You can also change the screen source by pressing the screen source buttons on the remote control.

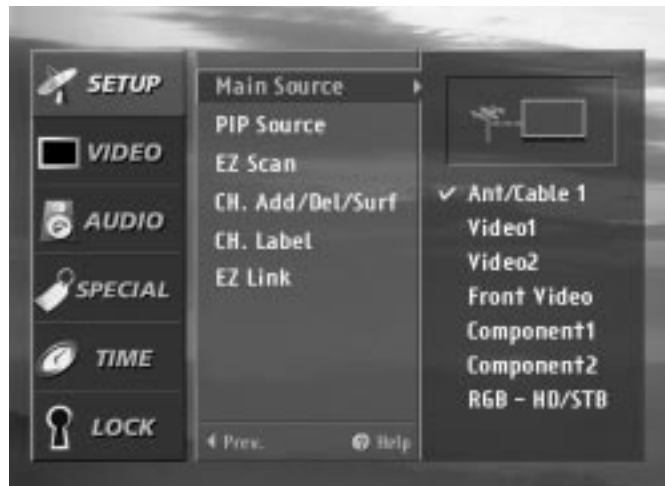


- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.
- 2** Press ENTER or the RIGHT arrow button to access the Setup menu.
- 3** Use the UP/DOWN arrows to select Main source.
- 4** Press ENTER or the RIGHT arrow to access the Main source screen. Your choices are: Ant/Cable 1 (Ant/Cable 2), Video 1, Video 2, Front Video, Component 1, Component 2 and RGB-PC.
- 5** Press EXIT to save and return to TV viewing or press the LEFT arrow to save and return to the previous Menu.

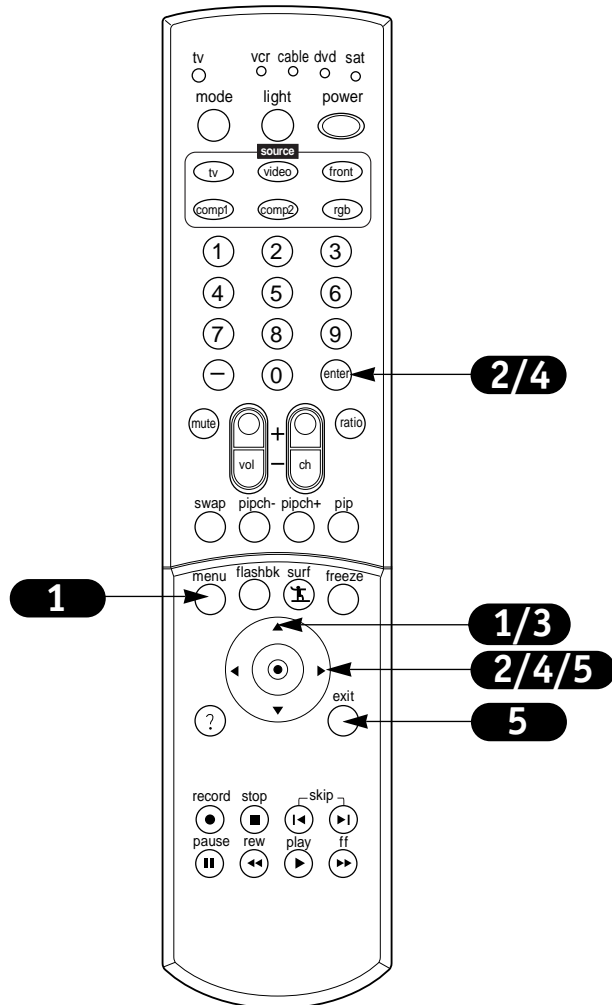


## PIP Source

Changes the screen source for the Picture-In-Picture screen so you can watch your off-air TV, cable TV, VCR, DVD, or any other devices that you have hooked up to your TV.

You can also change the PIP screen source by pressing the PIP button on the remote control.

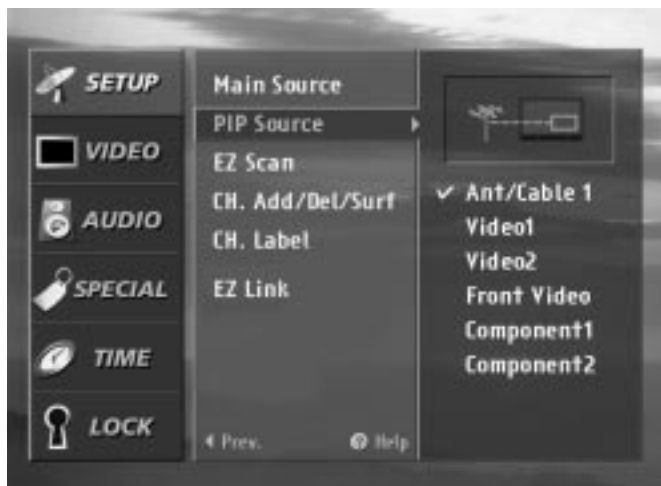

- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.
- 2** Press ENTER or the RIGHT arrow button to access the Setup menu.
- 3** Use the UP/DOWN arrows to select PIP Source.
- 4** Press ENTER or the RIGHT arrow to access the PIP source screen. Your choices are: Ant/Cable 1, Video 1, Video 2, Front Video, Component 1, Component 2.
- 5** Press EXIT to save and return to TV viewing or press the LEFT arrow to save and return to the previous Menu.

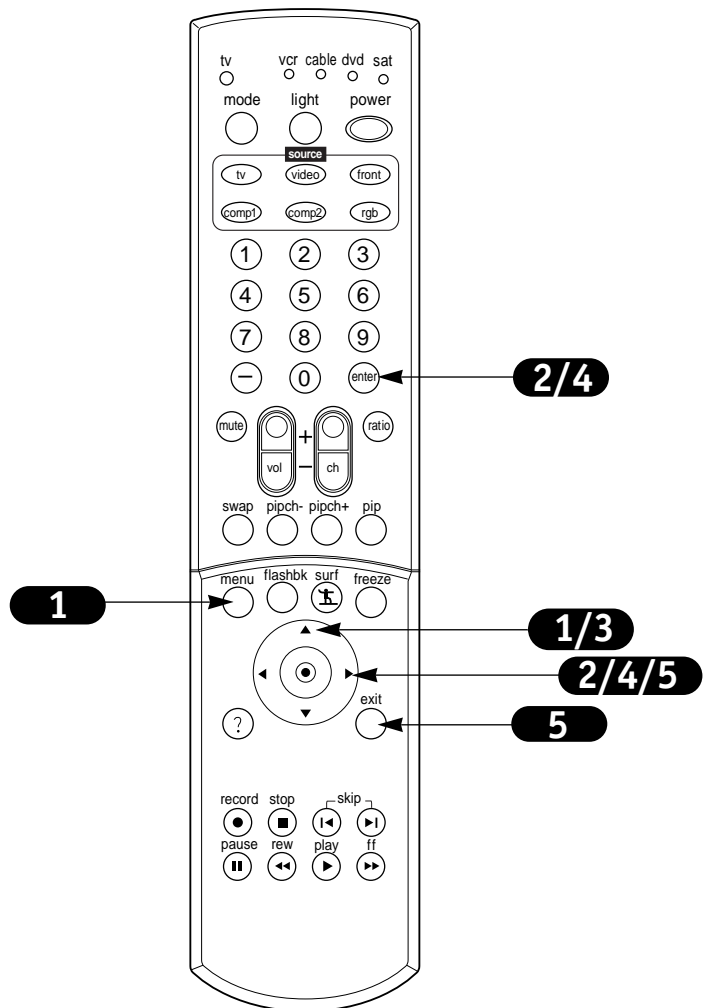

## PIP/POP/SPLIT

PIP (Picture in Picture) / POP (Picture out of Picture) / SPLIT modes let you watch main picture and sub picture at the same time.

PIP/POP/SPLIT modes become off in cases below.

- In changing main source
- In changing Aspect Ratio
- In activating Channel Add/Del/Surf, Channel Table or Channel Block in Setup menu
- In activating Help menu



**1** Press the PIP button on the remote control to activate PIP (Picture in Picture) mode.

**2** Press the LEFT/RIGHT arrow to select CH+/-, Swap, Source or Move.


- CH+/- : Press the UP/DOWN arrow to select a program of sub picture. To change programs of sub picture is possible only when PIP signal source is NTSC RF signal. If you want to change a program of main picture, press pg up/dn button.

- Swap : Press the UP/DOWN arrow to swap main and sub picture by.

- Source - Press the UP/DOWN arrow to select a source of sub picture. Your choices are : TV, Video1/2, Front, Component1/2. *RGB-HD/STB and RGB-PC input cannot used as PIP screen source.*


- Move : Press the UP/DOWN arrow to change the position of sub picture.

**3** Press the EXIT button to exit PIP mode or press the PIP button again to activate POP mode.

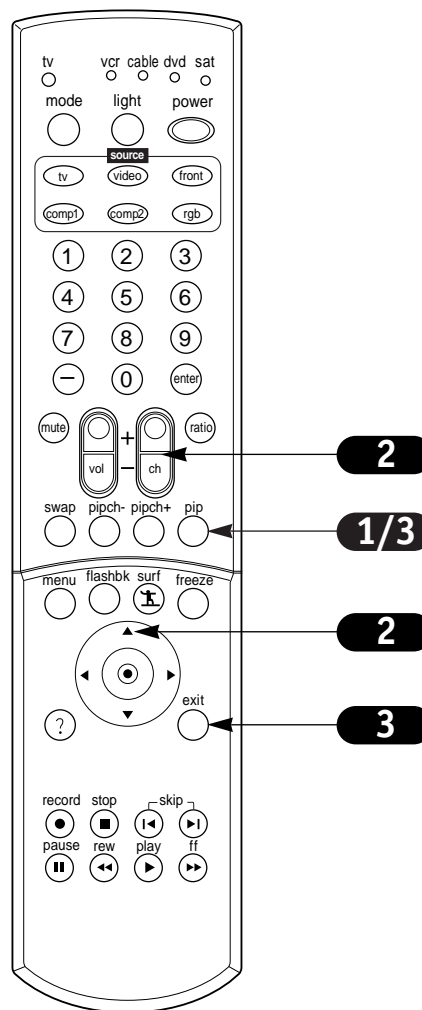



## PIP/POP/SPLIT

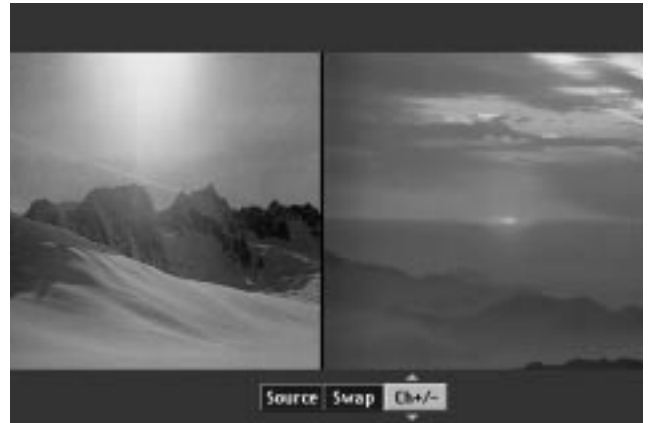

**1**

Press the PIP button on the remote control in PIP mode to activate POP (Picture out of Picture) mode.

**2**

Press the EXIT button to exit POP mode or press the PIP button again to activate Split mode.

**3**

Press the LEFT/RIGHT arrow in Split mode to select CH+/-, Swap or Source.

- **CH+/-** : Press the UP/DOWN arrow to select a program of sub picture. To change programs of sub picture is possible only when PIP signal source is NTSC RF signal. If you want to change a program of main picture, press pg up/dn button.
- **Swap** : Press the UP/DOWN arrow to swap main and sub picture.
- **Source** - Press the UP/DOWN arrow to select a source of sub picture. Your choices are : TV, Video1/2, Front, Component1/2. RGB-PC input cannot be used as PIP screen source.

**4**


Press the EXIT button to exit Split mode.



Press the FREEZE button to capture and freeze the currently-viewed sub picture in PIP or Split mode.



If you turn on the TV to still picture for hours, it occurs screen damage.

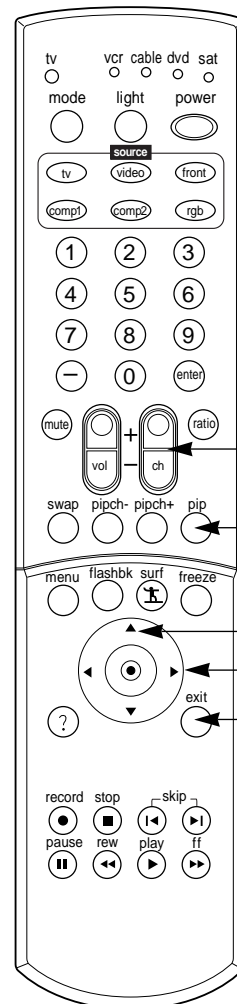

**3**

**1/2**

**3**

**3**


**2/4**

## EZ Scan


Automatically finds analog channels available through antenna and cable inputs, and stores all active channels on the channel list.



- 1 Use pages 10-14 to hook up your Entertainment Machine. If you have not done so, plug in your Entertainment Machine into a 120V 60Hz outlet.

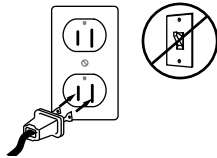

 - 2 If you have not done so, remove the back of the remote and put in two AA batteries. Make sure batteries are properly installed (check the +/- signs).

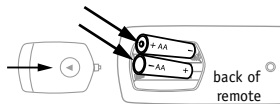

- 3 With the remote control in hand, press the POWER button to turn on your Entertainment Machine.


- 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.

- 5 Press ENTER or the RIGHT arrow button to access the Setup menu.



- 6 Use the UP/DOWN arrows to select EZ Scan.

- 7 Press ENTER or the RIGHT arrow to access the EZ Scan screen. Your choices are: ANT1 Air, ANT1 Cable, ANT2 Air, ANT2 Cable

- 8 Press ENTER or the Right arrow button to activate EZ Scan.

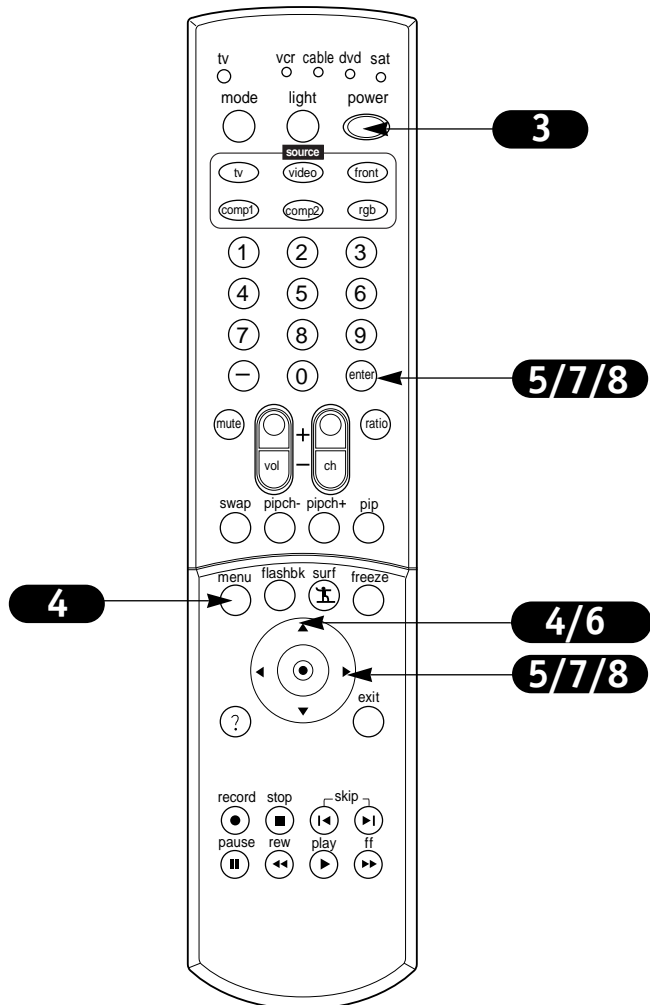

## Channel Add / Del / Surf

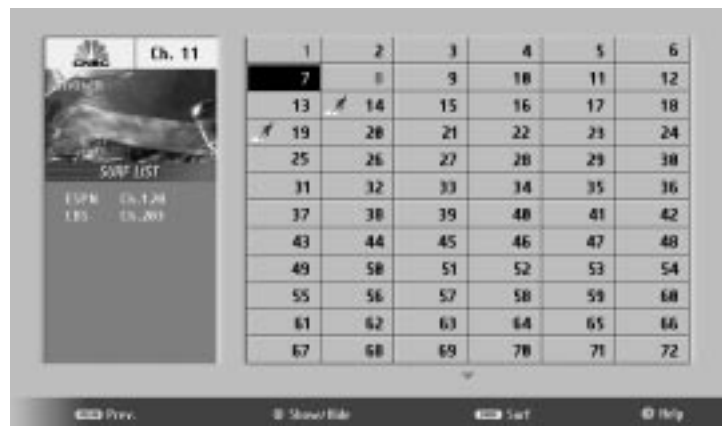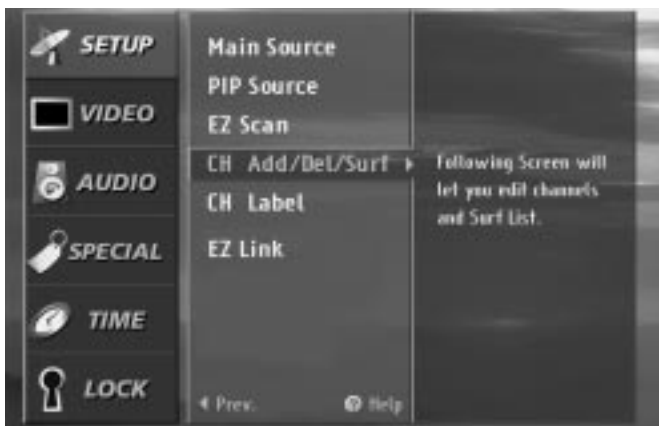


Create two different types of channel lists-custom list and surf list-from the default channel list made in the EZ SCAN menu.

A custom list can be created by toggling each channel on or off with **Ⓢ** (Enter). Once a channel is highlighted, you will be able to see whether the channel is currently added or deleted by referring to the small window at the top-left corner of the screen.

You can create your own surf list with up to 16 channels. It appears at the bottom-left corner of the screen.

Press the Surf button on the remote control when a channel is highlighted to add or delete the channel.

- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.
- 2** Press ENTER or the RIGHT arrow button to access the Setup menu.
- 3** Use the UP/DOWN arrows to select Channel Add/Del/Surf and then press ENTER or right arrow.
- 4** You will now see a screen filled with numbers and a preview screen. Use the UP/DOWN and LEFT/RIGHT arrows to select any given channel.
- 5** Press EXIT to save and return to TV viewing or press MENU to save and return to the previous menu.

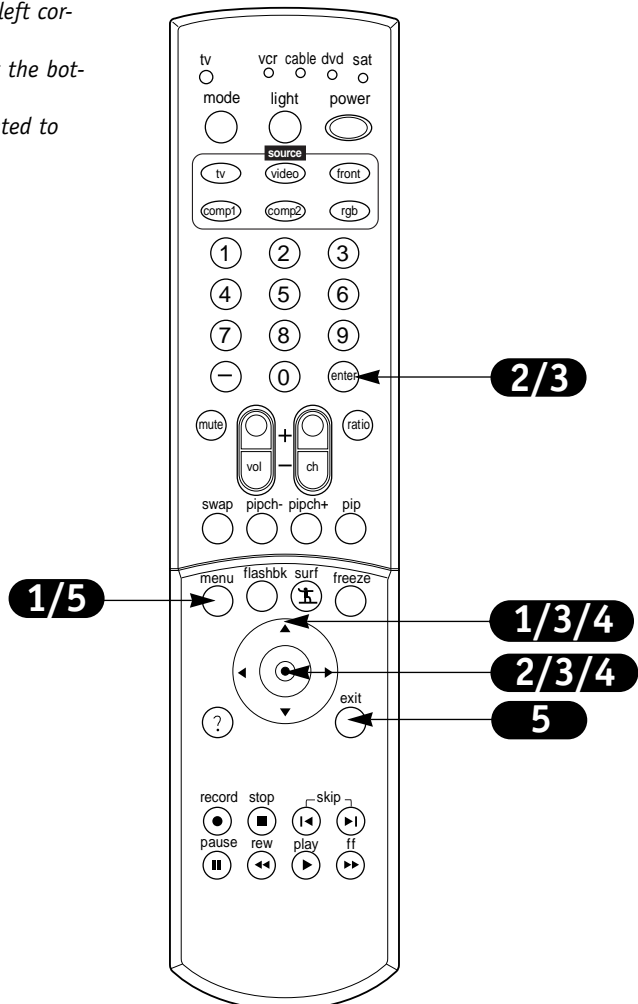

## Channel Label



Chooses preset labels for your channels.

Use Channel +/- on your remote control in the CH Label menu to select a channel for labeling, and choose a suitable label for your channel by pressing to set the label to the selected channel.

**1**

Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.

**2**

Press ENTER or the RIGHT arrow button to access the Setup menu.

**3**

Use the UP/DOWN arrows to select CH Label.

**4**

Press ENTER or the RIGHT arrow to access the CH.Label screen.

**5**

You will now see a screen filled with Labels and a preview screen. Press channel UP/DOWN button on your remote to select the channel to Label.

**6**


Use the UP/DOWN and LEFT/RIGHT arrows to select the appropriate label for the channel and press ENTER to set the Label to the selected channel.

**7**

Repeat steps five and six until all channels are Labeled.

**8**

Press EXIT to save and return to TV viewing.

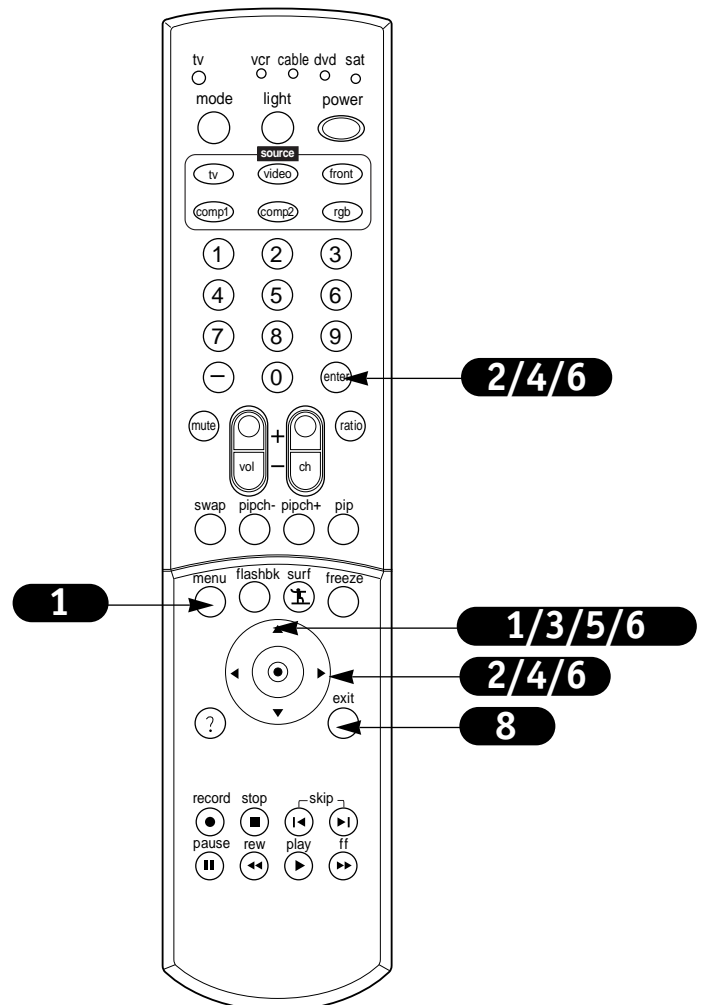

## EZ Link



**1**

Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.

**2**

Press ENTER or the RIGHT arrow button to access the Setup menu.

**3**


Use the UP/DOWN arrows to select EZ Link and then press ENTER or the RIGHT arrow button.

**4**

Use the UP/DOWN arrows to choose On or Off for the EZ Link.

**5**

Press EXIT to save and return to TV viewing or press the LEFT arrow to save and return to the previous Menu.

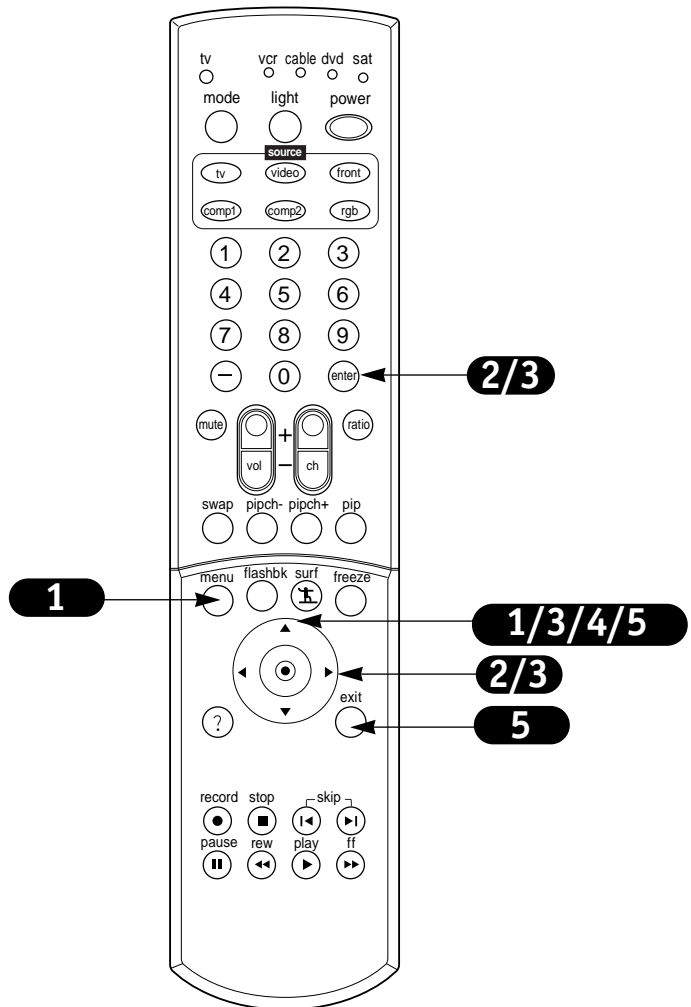


## VIDEO Menu

Lets you adjust the picture quality settings to suit your preference and viewing situations.



First, you can manually adjust the levels of picture quality settings, such as Contrast, Brightness, Sharpness, etc.  
Second, you can select the preset value in the EZ Video menu based on the program category.

- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Video menu.
- 2** Press ENTER or the RIGHT arrow button to access the Video menu.
- 3** Use the UP/DOWN arrows to select one of the following options. Your options are: Contrast, Brightness, Sharpness, color, Tint, EZ Video (Custom, Normal, Movie, Video Game, Sports, Weak Signal and Daylight). Then press ENTER or the Right arrow button.
- 4** Use the LEFT/RIGHT arrows to adjust your preferences.
- 5** Press ENTER to save your choices and return to the previous menu or press the UP/DOWN arrows to select other item.

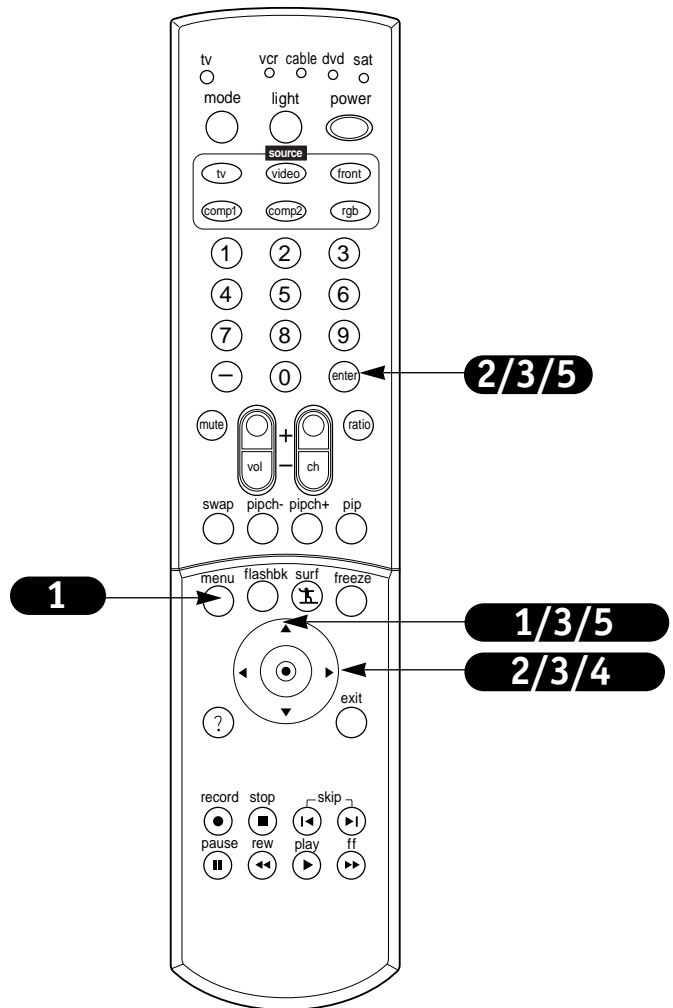



- **Contrast:** Adjusts the difference between the light and dark levels of the picture. Press the right arrow button to activate adjusting.
- **Brightness:** Adjusts the white or light level of the overall picture.
- **Sharpness:** Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.
- **Color:** Adjusts the intensity of all colors.
- **Tint:** Adjusts the balance between the red and green levels.
- **EZ Video:** Lets you choose the preset value of the picture settings.
  - Custom:** Lets you adjust the picture settings manually.
  - Normal:** Restores the levels to their original picture settings.
  - Movie** Adjusts Video settings to enhance Movie viewing. Contrast and Sharpness levels are lowered so that the picture looks warm and soft.
  - Video Game:** Sets the picture settings to the levels that are more suitable to enjoy games. Color, Contrast and Sharpness levels are lowered to reduce the amount of glare.
  - Sports:** Sets the picture settings to the levels that are more suitable to view sporting events. Contrast and Color levels are raised so that an action scene appears clear and brilliant.
  - Weak Signal:** Adjusts the picture settings to compensate for a weak signal reception. Contrast, Color and Sharpness levels are lowered to hide the picture imperfections.
  - Daylight:** Increases the levels of all picture settings to fit daylight conditions. All picture settings are increased Brightness....

## AUDIO Menu

Lets you adjust the sound to suit your taste and room situations.



**1**

Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Audio menu.

**2**

Press ENTER or the RIGHT arrow button to access the Audio menu.

**3**


Use the UP/DOWN arrows to select one of the following options. Your options are: Bass, Treble, Balance, EZ sound, EZ sound Rite, Audio Mode, Front Surround and Internal Speaker. Then press ENTER or the RIGHT arrow button.

**4**

Use the LEFT/RIGHT arrows to adjust your preferences and use UP/DOWN select your preference (Bass, Treble, Balance).

**5**

Press ENTER arrow to save your choices and return to the previous menu.

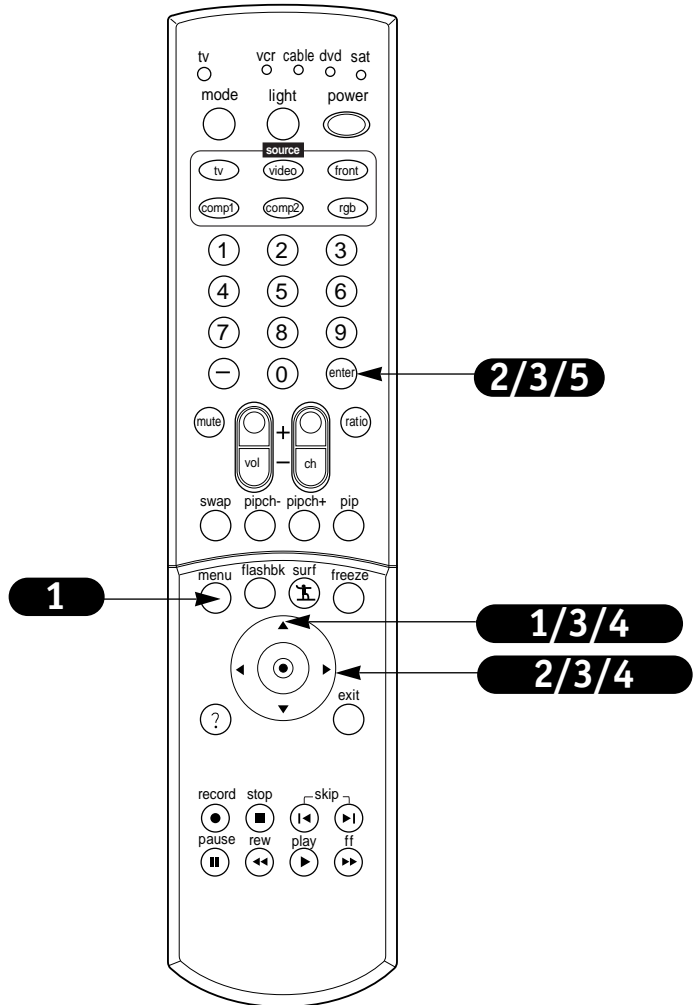





- **Bass:** Increases or decreases the lower frequency sounds of the TV speakers. Increases in bass, for example, make percussion stand out.
- **Treble:** Increases or decreases the higher frequency sounds of the TV speakers. Increases in treble, for example, make voice or string sounds stand out
- **Balance:** Lets you adjust the left to right balance of the TV speakers.
- **EZ Sound:** Lets you choose the sound settings manually.  
**Custom:** Lets you adjust the picture settings manually.  
**Normal:** Restores the sound levels to their original settings.  
**Stadium:** Stresses high frequency sounds and front surround sound to create a sense you would experience in a stadium.  
**News:** Increase high frequency sounds to emphasize the human voice.  
**Music:** Increase both high and low frequency sounds to stress the sounds of musical instruments.  
**Theater:** Stresses both high and low frequency sounds, in addition to the front surround sound, to create a sense you would experience in a theater.
- **EZ Sound Rite:** Scans for changes in sound level during commercials, then adjusts the sound to match your current audio level of the TV program you are watching.
- **Audio Mode:** Lets you choose the default audio mode for conventional analog programs. When you view a program broadcast in mono, you will hear only mono sound, even though Stereo mode is set. When Second Audio Program(SAP) mode is set, the program's second audio program, usually the program's dialog in another language, if provided, is broadcast in mono.
- **Front Surround:** Increases the front surround sound to create more open and expanded.
- **Internal Speaker:** Allows you to toggle the TV internal speakers Stereo, Center or off. If you want to use your external hi-fi stereo system, turn off the internal TV speakers. However, you may use the internal TV speakers as a center speaker to create a surround effect.

## Aspect Ratio

**1**

Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. Or press RATIO button to instantly access the Aspect Ratio menu.

**2**

Press ENTER or the RIGHT arrow button to activate the Special menu.

**3**

Use the UP/DOWN arrows to choose Aspect Ratio.

**4**

Press ENTER or the RIGHT arrow button to move into the Aspect Ratio selection menu. Use the UP/DOWN arrow buttons to select the right ratio for your viewing environment:


- Normal - Choose when you want to view a picture with an original 4:3 aspect ratio, with black bars appearing at both the left and right sides.
- Wide - Choose when you want to adjust the picture horizontally, in a linear proportion to fill the entire screen. (useful for viewing 4:3 formatted DVDs.)
- Panorama - Choose when you want to adjust the picture in a non-linear proportion, that is, more enlarged at both sides, to create a spectacular view.
- Zoom1 - Choose when you want to view the picture without any alteration. However the top and bottom portion of the picture will be cropped.
- Zoom2 - Choose when you want the picture to be altered, both horizontally enlarged and vertically cropped. The picture taking a halfway trade off between alteration and screen coverage.

**5**

Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu.



Lets you choose the way that an analog picture with a 4:3 aspect ratio is displayed on your TV with a 16:9 ratio. When you receive an analog picture with a 4:3 aspect ratio on your 16:9 TV, you need to specify how the picture is to be displayed according to your preference.

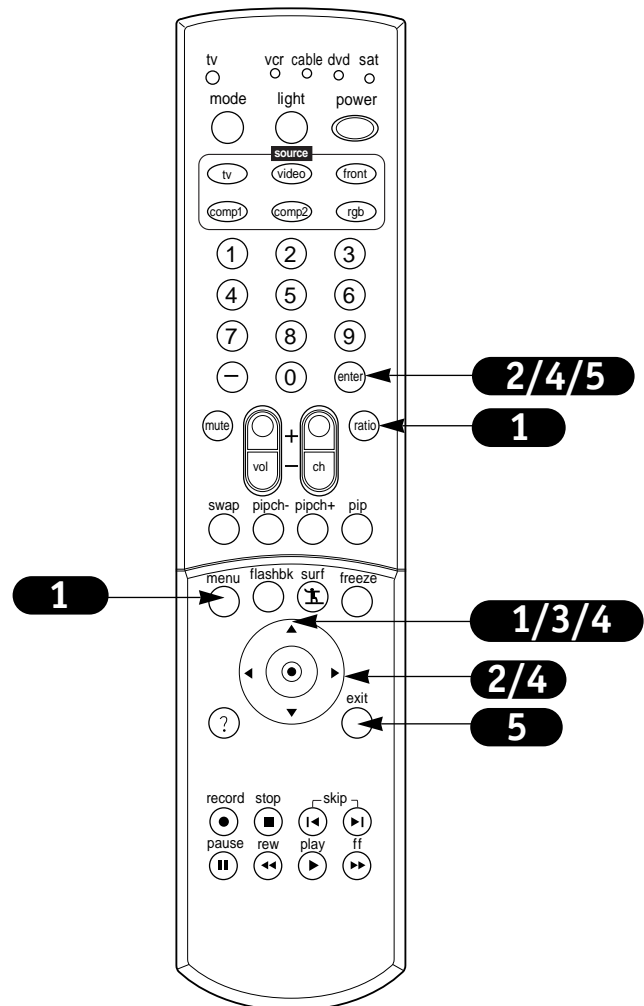


## On-Screen Languages

Lets you select your preferred language for the menus from a choice list.



- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu.
- 2** Press ENTER or the RIGHT arrow button to activate the Special menu.
- 3** Use the UP/DOWN arrows to choose Trilingual Menus.
- 4** Press ENTER or the RIGHT arrow button to move into the Language selection menu. Use the UP/DOWN arrow button to select the language you wish to view yours on-screen menus.
- 5** Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu.

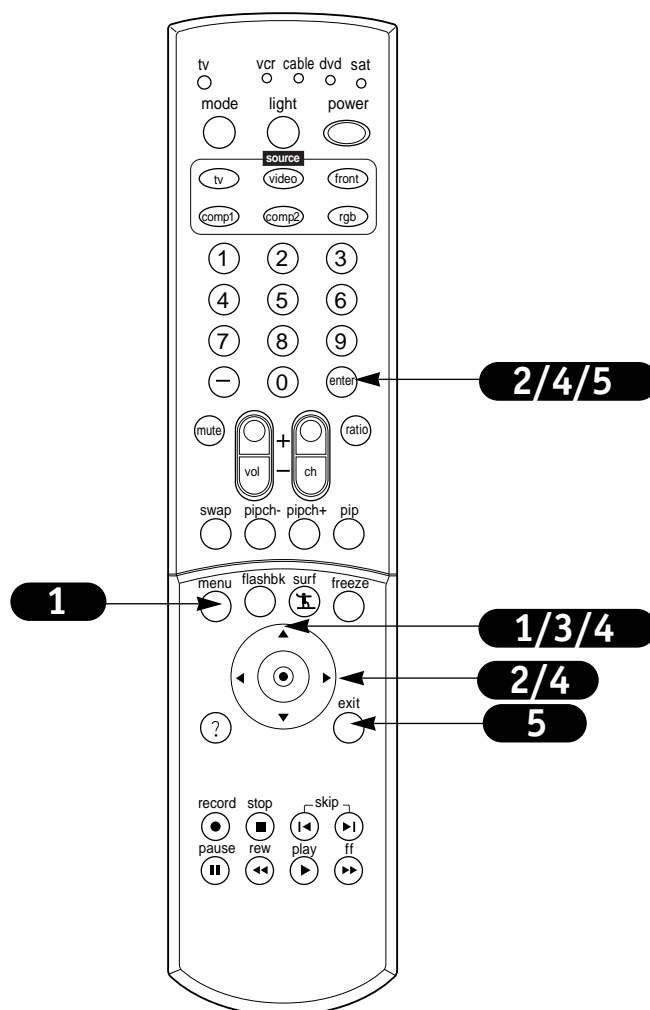

## Captions/Text


Lets you select a closed caption mode for displaying captioning information when provided.

Closed Caption (CC) displays information at any position on the screen and usually displays the program's dialog.

Text displays information, usually at the bottom position and is used for a data service, generally not program related.



- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu.
- 2** Press ENTER or the RIGHT arrow button to activate the Special menu.
- 3** Use the UP/DOWN arrows to choose Captions, then press ENTER or the Right arrow button.
- 4** Use the UP/DOWN arrow buttons to make your caption selection. Your choices are: Off, Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3 and Text 4.
- 5** Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu.

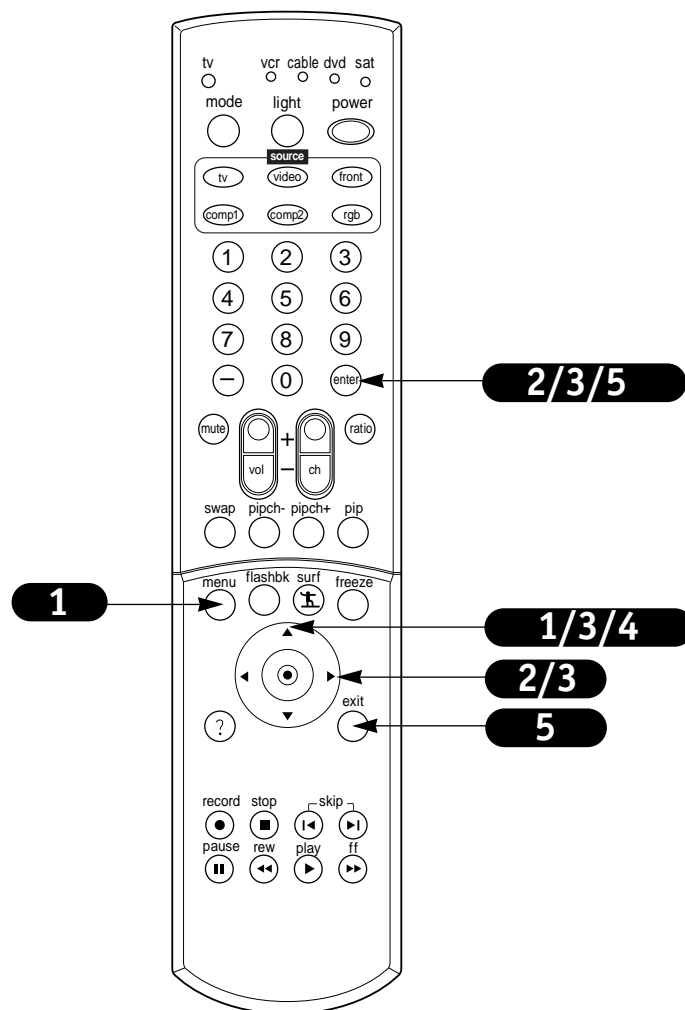


## EZ Demo

Shows you how to navigate the on-screen menus of your TV.



- 1 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu.
- 2 Press ENTER or the RIGHT arrow button to activate the Special menu.
- 3 Use the UP/DOWN arrows to choose EZ Demo, then press ENTER or the RIGHT arrow button to activate EZ Demo.
- 4 Press exit button on the remote to stop EZ Demo.

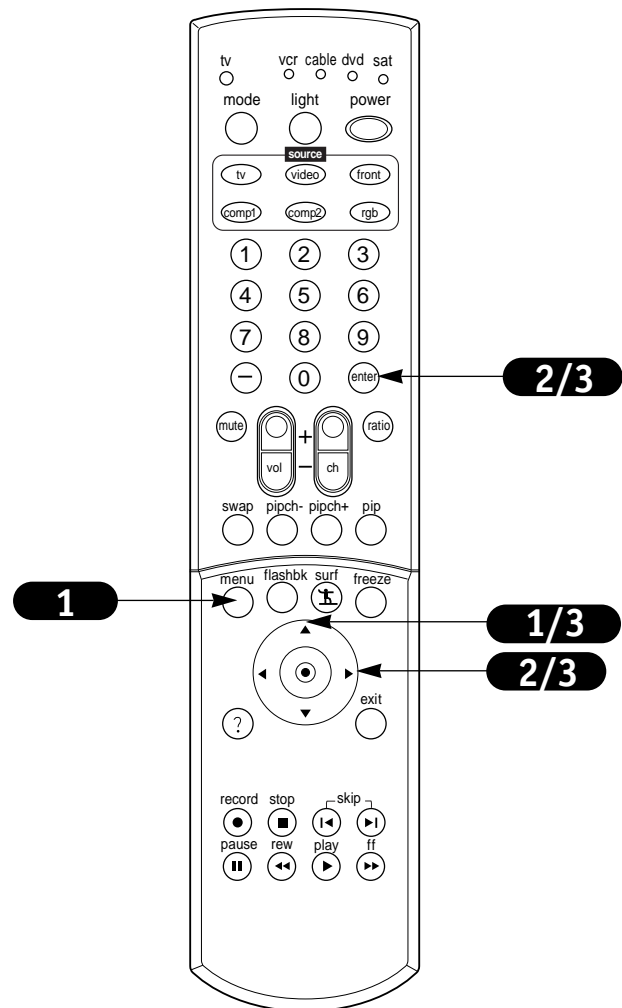

## Auto Clock

Sets the time automatically through the PBS broadcast signal.

This signal includes information for the correct time. Enter the local PBS channel number with the digit buttons on your remote control.



**1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Time menu.


**2** Press ENTER or the RIGHT arrow button to activate the Time menu.

**3** Press ENTER or the RIGHT arrow button to activate the Auto Clock then press the UP/DOWN arrow button to make your auto clock selection.

- Use the digit buttons to set the PBS channel.
- Time Zone - Lets you select the time zone of your viewing area.
- Daylight Savings - Lets you set Daylight Savings On or Off, depending on whether or not your viewing area observes Daylight Savings or not.
- If you select Auto Clock, press the RIGHT arrow to choose On or off.

**4** Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu.

**5** Your choices can be saved when Auto Clock is set.

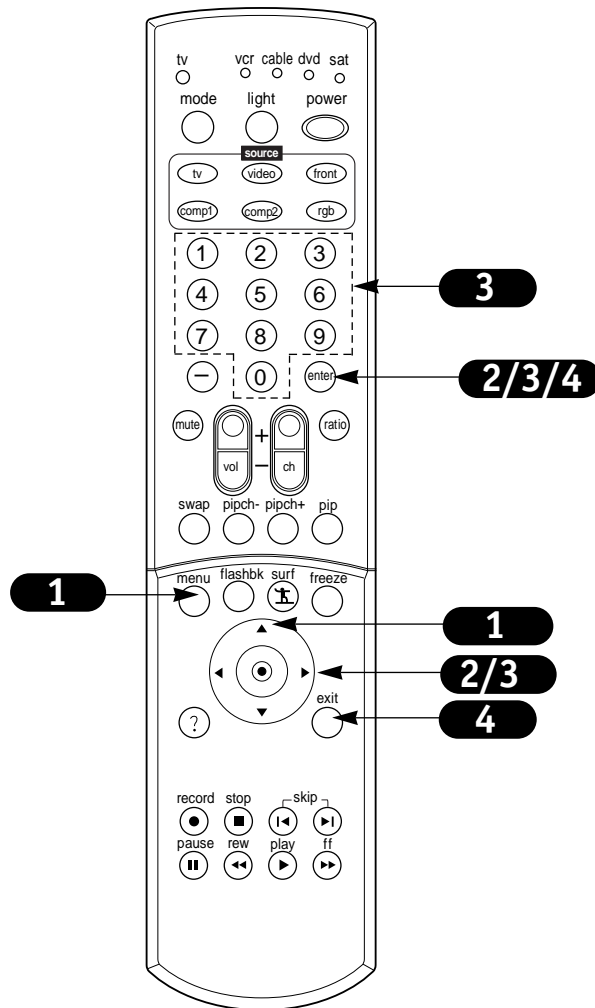


## Manual Clock

Enables you to enter the time using the digit buttons on your remote control.



- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Time menu.
- 2** Press ENTER or the RIGHT arrow button to activate the Time menu.
- 3** Use the UP/DOWN arrow button to choose Manual Clock, then press the RIGHT arrow to activate Manual Clock.
- 4** Use the UP/DOWN arrows to make your Manual Clock selection. Your choices are: Year, Date and Time.
- 5** Use the digit buttons to set the Year, Date and Time.
- 6** Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu.

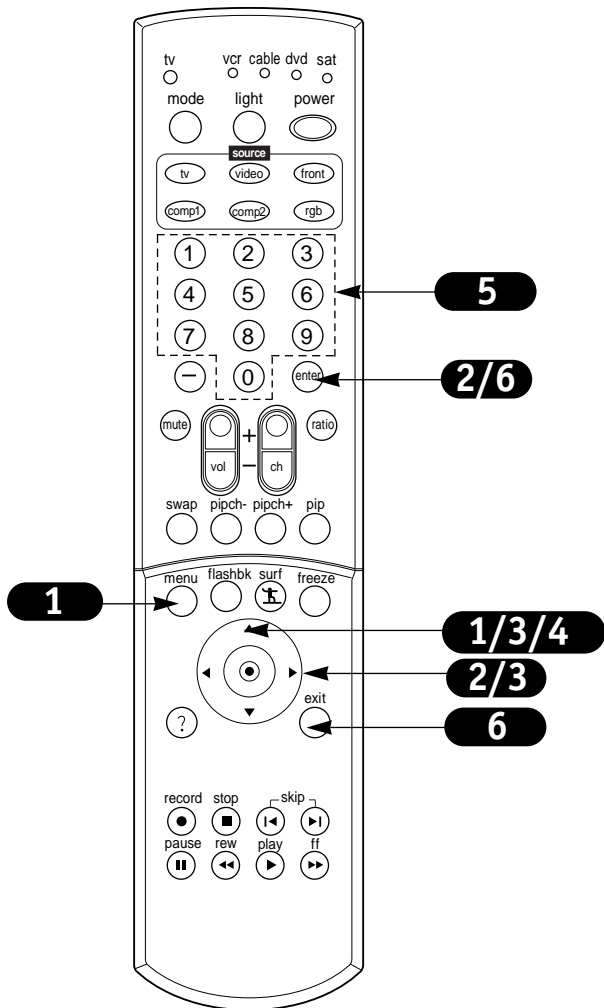

## On Time


Lets you set up the on time for your TV to automatically turn itself on .



- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Time menu.
- 2** Press ENTER or the RIGHT arrow button to activate the Time menu.
- 3** Use the UP/DOWN arrows to choose On Time then press the RIGHT arrow to activate On Time.
- 4** Use the UP/DOWN arrows to choose On or Off.
- 5** Use the digit buttons to set the On Time options.
- 6** Press EXIT to save and return to TV viewing, or press the ENTER button to save and return to the previous menu.



You must set the current time before using on/off time function.

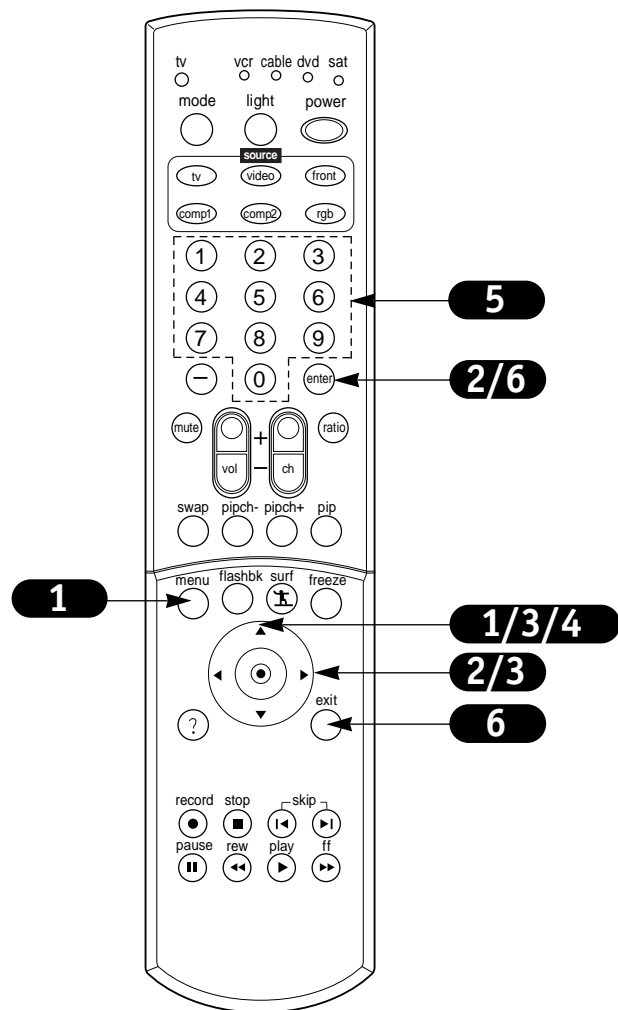




## Off Time

Lets you set up the off time time for your TV to automatically turn itself off.



- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Time menu.
- 2** Press ENTER or the RIGHT arrow button to activate the Time menu.
- 3** Use the UP/DOWN arrows to choose Off Time then press the RIGHT arrow to activate Off Time.
- 4** Use the UP/DOWN arrows to choose On or Off.
- 5** Use the digit buttons to set the Off Time options.
- 6** Press EXIT to save and return to TV viewing, or press the ENTER button to save and return to the previous menu.

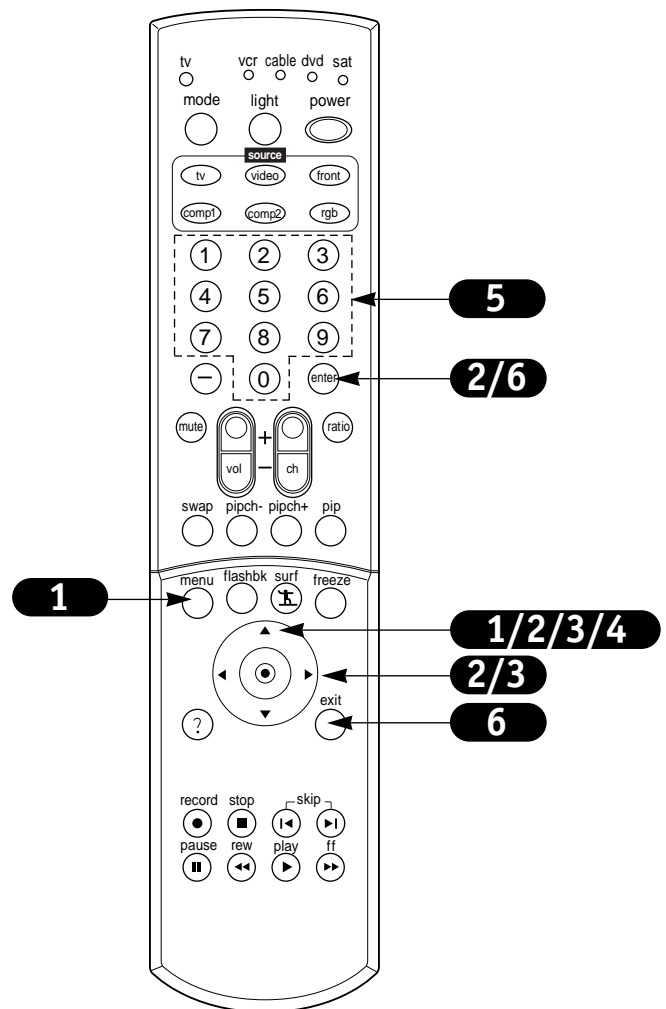


## Sleep Timer

Lets you select the amount of time before your TV automatically Turns itself off.



- 1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Time menu.
- 2** Press ENTER or the RIGHT arrow button to activate the Time menu.
- 3** Use the UP/DOWN arrows to choose Sleep Timer then press the RIGHT arrow to activate Sleep Timer.
- 4** Use the UP/DOWN arrows to choose a preset turn off time.
- 5** Press EXIT to save and return to TV viewing, or press the ENTER button to save and return to the previous menu.

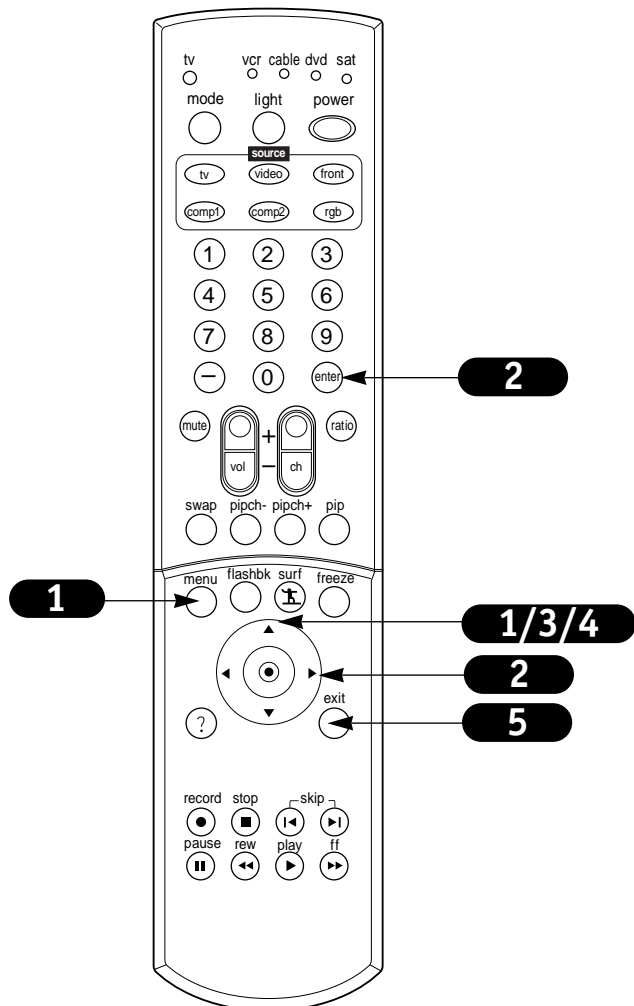

## Parental Lock

Lets you block specific channels, ratings and other sources based on the blocking schemes.


A password is required to gain access to this menu if the Lock System is activated.



**1** Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the LOCK Menu.

**2** Press ENTER or the RIGHT arrow button to activate the LOCK Menu.

**3** See the next page for more details on your blocking options.

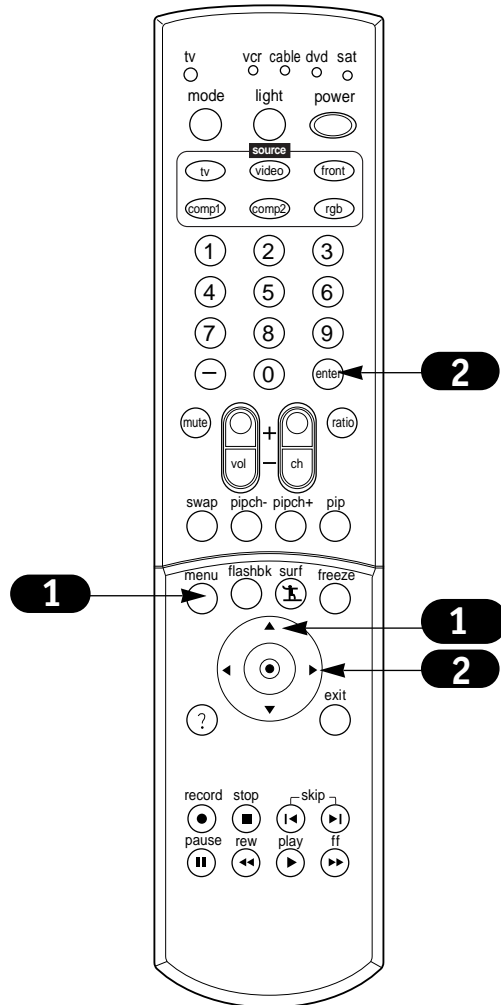


## Parental Lock

4

Use the UP/DOWN arrows to choose LOCK Menus.

- **Lock On/Off** : Activates or disables all the blocking scheme you set up previously.
- **Set Password** : Changes the password by inputting a new password twice.
- **Movie(MPPA)** : Blocks movies according to the movie ratings limit, so children cannot view certain movies. You can set the ratings limit by blocking out all the movies with the ratings above a specified level. Keep in mind that the movie ratings limit only applies to movie shown on TV, not TV programs, such as soap operas.
- **TV-PG(Children)** : Keeps children from watching certain TV programs among only the programs intended for children, according to the ratings limit. This rating does not apply to other TV programs. Unless you block certain TV programs intended for mature audiences in the TV Rating - General menu, your children may view those programs.
- **TV-PG(General)** : Blocks certain TV programs that you and your family do not want to view, based on the ratings.
- **Block Channel** : Blocks any channels that you do not want to view or that you do not want your children to watch.
- **Aux. Block** : Enables you to select a source for blocking among the devices you have hooked up.

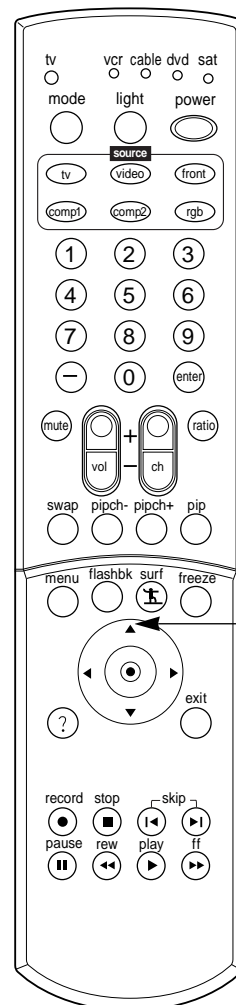

## Parental Lock



**TV-Y7** (Directed to Older Children) : This program is designed for children age 7 and above.

**TV-G** (General audience) : Most parents would find this program suitable for all ages.

**TV-PG** (Parental guidance suggested) : This program contains material that parents may find unsuitable for younger children.

**TV-14** (Parents strongly cautioned) : This program contains some material that many parents would find unsuitable for children under 14 years of age.

**TV-MA** (Mature audience only) : This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.

**G** (General audiences) : All ages admitted.

**PG** : Parental guidance suggested. Some material may not be suitable for children.

**PG-13** : Parents strongly cautioned Some material may not be appropriate for children under 13.

**R** (Restricted) : Children under 17 requires accompanying parent or adult guardian.

**NC-17** : No one 17 and under admitted.

**TV-Y** (All Children) : This program is determined to be appropriate for all children.

**X** : Adult admitted only.


**NR** : Not rated movie.

## Programming the Remote

The remote control of your HD receiver is a multi-brand or universal remote control that can be programmed to control most remote-controllable components of other manufacturers.

Note that the remote control may not control all models of other brands.

- 1** Test your remote control.  
To find out whether your remote control can operate component without programming, turn on the component such as the VCR and press the corresponding mode button (VCR) on the remote control while pointing at the component. Test the **POWER** and **CH +/-** buttons to see if the component responds properly. If not, it requires programming.
- 2** Turn on the component to be programmed. Then press the corresponding mode button on the remote control.
- 3** Press the **POWER** button and the **MUTE** button simultaneously. Then the remote control is ready to program the code for the corresponding component.
- 4** There are two ways to find the right code of the component.  
  
First, if you press the **CH +/-** buttons repeatedly, the code will change one at a time. Press the **POWER** button after each code change. If the right code is found, the device will turn off.  
  
Second, enter the code number using the digit buttons on the remote. The right code numbers for the corresponding component can be found on the following pages. Again, if the code is correct, the device will turn off.
- 5** Press the **EXIT** button to store the program.
- 6** Test the remote control functions to see if the component responds properly. If not, repeat from step 2.

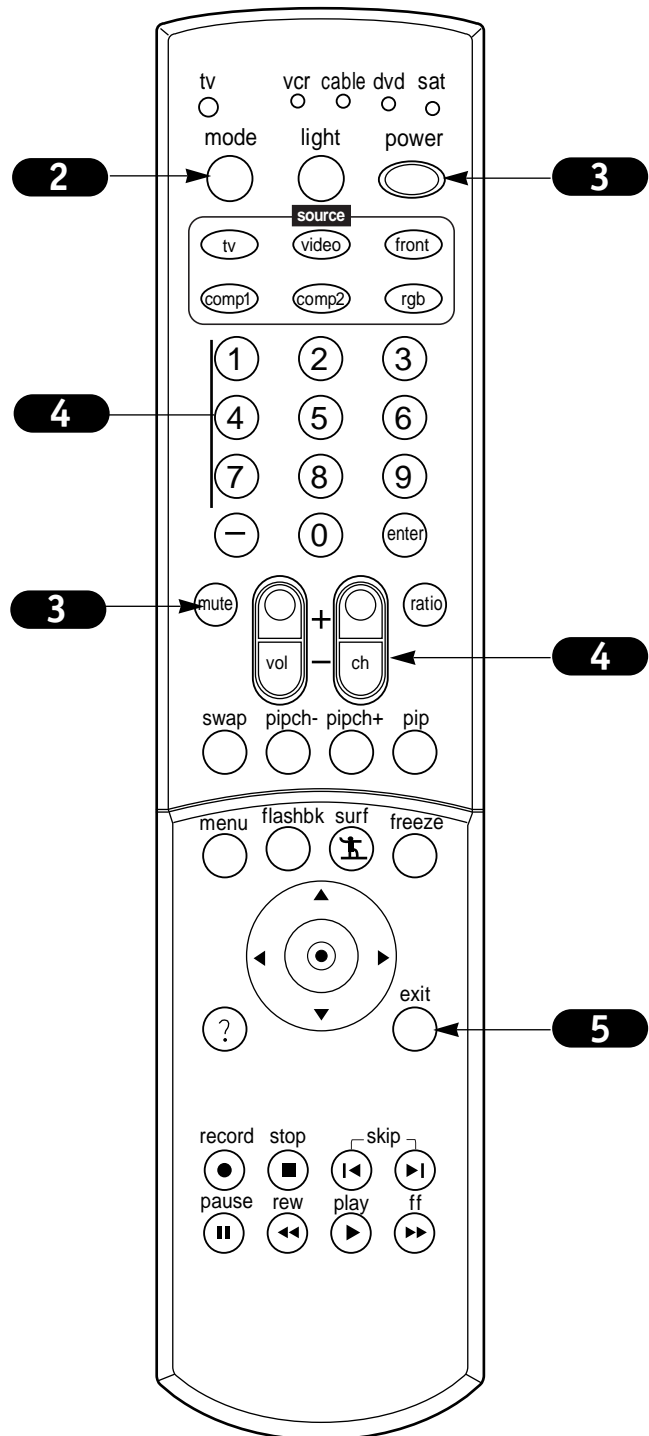

# Programming Codes

## TVs

Brand	Codes	Brand	Codes	Brand	Codes	Brand	Codes
A MARK	112 143	GOLDSTAR	004 102 106		019 024 040	Sharp	004 014 019
ADMIRAL	072 081 161		110 112 113		056 130 132		022 028 029
AKAI	006 146		116 119 122	NIKEI	134		081 143 170
AMPRO	073 167		127 137 143	ONKING	043		175
AMSTRAD	052	HALL MARK	004 116	ONWA	043	SIEMENS	088
ANAM	043 054 056	HITACHI	004 006 009	OPTONICA	019 081	SIGNATURE	072
	080 104 108		010 011 012	PANASONIC	034 056 080	SONY	041 070 079
	112 115 118		023 041 075		092 164		085 126 139
	121 131		143 158 163	PHILCO	003 004 006	SOUNDESIGN	003 004 028
AOC	004 006 058		166		024 043 056		043 116
	112	INFINITY	164		059 060 063	SPECTRICON	112
BLAUPUNKT	088	INKEL	129		064 127 143	SSS	004 043
CANDLE	002 003 004	JBL	164		164	SUPRE MACY	002
	006	JCPENNY	004 006 008	PHILIPS	003 004 005	SYLVANIA	003 004 006
CAPEHART	058		009 024 030		006 038 059		044 059 060
CETRONIC	043		065 101 143		070 093 143		063 064 116
CITIZEN	002 003 004		156 160		160 164		127 140 160
	006 043 101	JENSEN	013	PIONEER	006 018 023		164
	103 143	JVC	034 038 070		025 027 116	TANDY	081
CLASSIC	043		083 145		135 176	TATUNG	056 062
CONCERTO	004	KEC	043	PORTLAND	004 143	TECHNICS	034 080 084
CONTEC	039 043 050	KENWOOD	006 070	PROSCAN	144 160 161	TECHWOOD	004
	051	KLOSS	002 059		165 167	TEKNIKA	002 003 004
CORONADO	143	KMC	143	PROTON	004 058 116		006 024 028
CRAIG	043 054	KTV	006 043 143		131 143 171		031 043 072
CROWN	043 143		154		173		077 101 103
CURTIS MATHES	004 006 101	LG	255	QUASAR	034 056 092		143
	116 143	LODGENET	072	RADIO SHACK	019 043 047	TELEFUNKEN	037 046 086
CXC	043	LOGIK	072		116 127 143		087
DAEWOO	004 016 017	LUXMAN	004	RCA	004 006 023	TELERENT	072
	043 044 055	LXI	007 015 052		024 056 065	TERA	172
	071 076 103		081 160 164		074 144 152	TMK	004 116
	107 111 114		166		156 160 161	TOSHIBA	007 015 030
	117 120 123	MAGNAVOX	003 004 006		165		040 051 062
	125 127 128		022 059 060	REALISTIC	007 019 043		101 138
	136 143		061 063 064		047	TOTEVISION	143
DAYTRON	004 116 143		127 143 160	ROCTEC	186	UNIVERSAL	008 009
DYNASTY	043		164	RUNCO	168 169	VIDEO CONCEPTS	146
DYNATECH	062	MARANTZ	006 077 164	SAMPO	004 006 058	VIDIKRON	174
ELECTROHOME	024 077 143	MATSUI	164		116	VIDTECH	004 116
EMERSON	004 005 006	MEMOREX	004 007 072	SAMSUNG	004 050 089	WARDS	004 008 009
	028 043 047		116		101 105 113		019 028 060
	048 050 051	METZ	088		116 127 133		061 063 064
	096 116 143	MGA	004 006 024		137 143 160		072 074 116
	151 153 154		028 042 049	SANYO	007 020 021		143 164
	155		077 116		033 039 053	YAMAHA	004 006
FISHER	007 057	MINERVA	088		057 082 166	YORK	004 116
FUNAI	028 043	MITSUBISHI	004 006 024	SCOTT	004 028 043	YUPITERU	043
FUTURETECH	043		028 040 042		048 116 143	ZENITH	001 072 073
GE	004 006 008		109 116 124	SEARS	004 007 015		095 103 157
	009 034 056		146		028 030 057	ZONDA	112
	073 074 091	MTC	004 006 062		082 094 101		
	116 130 144		101		116 143 160		
	155 160 161	NAD	015 025				
	165	NEC	006 007 016				

# Programming Codes

## VCRs

Brand	Codes	Brand	Codes	Brand	Codes	Brands	Codes
AIWA	034		055 060 130		034 040 041	TOTEVISION	040 101
AKAI	016 043 046		150 152		062 063 107	UNITECH	040
	124 125 146	KENWOOD	014 034 039		109 140 144	VECTOR RESEARCH	012
AMPRO	072		043 047 048		145 147	VICTOR	048
ANAM	031 033 103	LG	255	REALISTIC	003 008 010	VIDEO CONCEPTS	012 034 046
AUDIO DYNAMICS	012 023 039	LLOYD	034		014 031 033	VIDEOSONIC	040
	043	LXI	003 009 013		034 040 053	WARDS	003 013 017
BROKSONIC	035 037 129		014 017 034		054 101		024 031 033
CANON	028 031 033		101 106	RICO	058		034 040 053
CAPEHART	108	MAGIN	040	RUNCO	148		054 131
CRAIG	003 040 135	MAGNAVOX	031 033 034	SALORA	014	YAMAHA	012 034 039
CURTIS MATHES	031 033 041		041 067 068	SAMSUNG	032 040 102		043
DAEWOO	005 007 010	MARANTZ	012 031 033		104 105 107	ZENITH	001 034 048
	064 065 108		067 069		109 112 113		056 058 072
	110 111 112	MARTA	101		115 120 122		080 101
	116 117 119	MATSUI	027 030		125		
DAYTRON	108	MEI	031 033	SANSUI	022 043 048		
DBX	012 023 039	MEMOREX	003 010 014		135		
	043		031 033 034	SANYO	003 007 010		
DYNATECH	034 053		053 072 101		014 102 134		
ELECTROHOME	059		102 134 139	SCOTT	017 037 112		
EMERSON	006 017 025	MGA	045 046 059		129 131		
	027 029 031	MINOLTA	013 020	SEARS	003 008 009		
	034 035 036	MITSUBISHI	013 020 045		010 013 014		
	037 046 101		046 049 051		017 020 031		
	129 131 138		059 061 151		042 073 081		
	153	MTC	034 040		101		
FISHER	003 008 009	MULTITECH	024 034	SHARP	031 054 149		
	010	NEC	012 023 039	SHINTOM	024		
	034		043 048	SONY	003 009 031		
FUNAI	034	NORDMENDE	043		052 056 057		
GE	031 033 063	OPTONICA	053 054		058 076 077		
	072 107 109	PANASONIC	066 070 074		078 149		
	144 147		083 133 140	SOUNDESIGN	034		
GO VIDEO	132 136		145	STS	013		
GOLDSTAR	012 013 020	PENTAX	013 020 031	SYLVANIA	031 033 034		
	101 106 114		033 063		059 067		
	123	PHILCO	031 034 067	SYMPHONIC	034		
HARMAN KARDON	012 045	PHILIPS	031 033 034	TANDY	010 034		
HITACHI	004 018 026		054 067 071	TATUNG	039 043		
	034 043 063		101	TEAC	034 039 043		
	137 150	PILOT	101	TECHNICS	031 033 070		
INSTANTREPLAY	031 033	PIONEER	013 021 048	TEKNIKA	019 031 033		
JCL	031 033	PORTLAND	108		034 101		
JCPENNY	012 013 015	PULSAR	072	THOMAS	034		
	033 040 066	QUARTZ	011 014	TMK	006		
	101	QUASAR	033 066 075	TOSHIBA	008 013 042		
JENSEN	043		145		047 059 082		
JVC	012 031 033	RCA	013 020 033		112 131		
	043 048 050						



## Programming Codes

### SAT

Brand	Codes	Brand	Codes	Brand	Codes	Brand	Codes
ALPHASTAR DSR	123		027 133 134	PERSONAL CABLE	117	VIEWSTAR	115
AMPLICA	050	GENERAL INSTRUMENT	003 004 016	PHILIPS	071	WINEGARD	128 146
BIRDVIEW	051 126 129		029 031 059	PICO	105	ZENITH	001 081 082
BSR	053		101	PRESIDENT	019 102		083 084 091
CAPETRONICS	053	HITACHI	139 140	PRIMESTAR	030 110 111		120
CHANNEL MASTER	013 014 015	HOUSTON TRACKER	033 037 039	PROSAT	072		
	018 036 055		051 057 104	RCA	066 106		
CHAPARRAL	008 009 012	HUGHES	068	REALISTIC	043 074		
	077	HYTEK	053	SAMSUNG	123		
CITOH	054	JANIEL	060 147	SATELLITE SERVICE CO	028 035 047		
CURTIS MATHES	050 145	JERROLD	061		057 085		
DRAKE	005 006 007	KATHREIN	108	SCIENTIFIC ATLANTA	032 138		
	010 011 052	LEGEND	057	SONY	103		
	112 116 141	LG	255	STARCAST	041		
DX ANTENNA	024 046 056	LUTRON	132	SUPER GUIDE	020 124 125		
	076	LUXOR	062 144	TEECOM	023 026 075		
ECHOSTAR	038 040 057	MACOM	010 059 063		087 088 090		
	058 093 094		064 065		107 130 137		
	095 096 097	MEMOREX	057	TOSHIBA	002 127		
	098 099 100	NEXTWAVE	028 124 125	UNIDEN	016 025 042		
	122	NORSAT	069 070		043 044 045		
ELECTRO HOME	089	PACE SKY SATELLITE	143		048 049 078		
EUROPLUS	114	PANASONIC	060 142		079 080 086		
FUJITSU	017 021 022	PANSAT	121		101 135 136		

### DVD

Brand	Codes	Brand	Codes	Brand	Codes	Brand	Codes
APEX DIGITAL	022		025	PHILIPS	013	THOMPSON	005 006
DENON	020 014	MAGNAVOX	013	PIONEER	004 026	TOSHIBA	019 008
GE	005 006	MARANTZ	024	PROCEED	021	YAMAHA	009 018
GOLDSTAR	010 016 025	MITSUBISHI	002	PROSCAN	005 006	ZENITH	010 016 025
HARMAN KARDON	027	NAD	023	RCA	005 006		
JVC	012	ONKYO	008 017	SAMSUNG	011 015		
LG	001 010 016	PANASONIC	003 009	SONY	007		

# Programming Codes

## CATV

Brand	Codes	Brand	Codes	Brand	Codes	Brand	Codes
ABC	003 004 039		008 009 010	REGAL	049 050		032 035
	042 046 052		052 069 074	REGENCY	057	VIEWSTAR	012 015 018
	053	LG	255	REMBRANT	025		086 087 088
ANTRONIK	014	M-NET	037	RK	091		089
ARCHER	005 007 014	MACOM	033	SAMSUNG	030 068	ZENITH	001 060 093
	024	MAGNAVOX	010 012 064	SCIENTIFIC ATLANTA	003 011 041		
CABLE STAR	026		079		042 043 045		
CENTURION	092	MEMOREX	001		046		
CENTURY	007	MOVIE TIME	028 032	SHERITECH	022		
CITIZEN	007	NSC	015 028 038	SIGNAL	030		
COLOUR VOICE	065 090		071 073	SIGNATURE	052		
COMBANO	080 081	OAK	016 031 037	SL MARX	030		
COMTRONICS	019 030		053	SPRUCER	047 078		
DIAMOND	023	PANASONIC	044 047	STARCOM	002 004 008		
EAGLE	020 030 040	PARAGON	001		009		
EASTERN	057 062 066	PHILIPS	006 012 013	STARGATE	008 030		
ELECTRICORD	032		020 065 085	SYLVANIA	067		
GE	072		090	TADIRAN	030		
GEMINI	008 022 025	PIONEER	034 051 052	TANDY	017		
	054		063 076	TEXSCAN	029 067		
GI	052 074	POST NEWS WEEK	016	TOCOM	039 040 056		
GOLDEN CHANNEL	030	PRUCER	059	TOSHIBA	001		
HAMLIN	049 050 055	PTS	011 048 071	UNIKA	007 014 024		
HITACHI	052 055		072 073 074	UNITED CABLE	004 053		
HOSPITALITY	070 077	PULSAR	001	UNIVERSAL	005 007 014		
JERROLD	002 003 004	RCA	047		024 026 027		

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning.

### SCREEN CLEANING

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine.

### CABINET CLEANING

1. Use a soft cloth with a mild soap solution to wipe the cabinet.
2. Rinse the cloth and wipe the cabinet again.
3. Let the cabinet air-dry before turning the Entertainment Machine on.

### WOOD CABINETS

Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new.

### EXTENDED ABSENCE



If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your Entertainment Machine before leaving.

### PICTURE INTERFERENCE

Even though you may be getting cable, the signal may be weak, which means the quality of your picture may suffer due to other factors. If there are problems with the image on your Entertainment Machine, consult the Troubleshooting guide on the following pages.

### VIDEO GAMES AND OTHER FIXED-PATTERN DISPLAYS

If you use your Entertainment Machine to play video games or for other uses that have single, fixed images, such as a photo-CD player, you should avoid setting the Brightness level too high. If static images, like network identification patterns, are left sitting for too long, they can leave a permanent impression on the picture tube. You can reduce the chance of this happening by limiting the amount of time you use the fixed-image display, and by reducing the contrast and brightness levels.



*If you unplug your Entertainment Machine, you may have to reset the clock using the Time menu described earlier.*

## Troubleshooting

Some quick and easy tips to fixing problems yourself.

SYMPTOMS	SOLUTIONS
<b>Snowy picture and unclear sound.</b>	<ul style="list-style-type: none"><li>• Check your antenna connection or location.</li><li>• Check your cable input.</li><li>• Check to see if the TV/VCR button on your VCR has the TV selected.</li></ul>
<b>Multiple images or 'ghost shadows.'</b>	<ul style="list-style-type: none"><li>• Check your antenna direction and/or location.</li><li>• Check your cable input.</li><li>• Make sure the cable from your antenna to your Entertainment Machine is properly connected.</li></ul>
<b>Interference: Sharp lines across the screen and unclear sound.</b>	<p><i>The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment</i></p> <ul style="list-style-type: none"><li>• If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off.</li></ul>
<b>Normal picture but no sound.</b>	<ul style="list-style-type: none"><li>• Check volume levels.</li><li>• Make sure the TV is not Muted.</li><li>• Try another channel. The problem may be the broadcast, not your Entertainment Machine.</li><li>• Are the Audio A/V cables properly installed?</li><li>• Are the wires for external speakers (if you have external speakers) properly installed?</li><li>• Make sure your speakers turned on under the Audio menu.</li><li>• If your audio mode is set to SAP, that channel may not have a SAP program.</li></ul>
<b>No picture and unclear sound.</b>	<ul style="list-style-type: none"><li>• Are you in TV or cable tuning mode, and should be in the other?</li><li>• Make sure output channels on all A/V equipment are on the same channel (3 or 4).</li><li>• Check that all connections are tight.</li></ul>
<b>No picture and no sound.</b>	<ul style="list-style-type: none"><li>• Is the AC power plugged in?</li><li>• Check that your AC power outlet works. (Test it by plugging in something else or try another plug.)</li><li>• Make sure your brightness and audio controls are set properly.</li><li>• Try another channel. The problem may be with the broadcast.</li></ul>
<b>No color, but the sound is O.K.</b>	<ul style="list-style-type: none"><li>• Check the color control in the Video menu.</li><li>• Try another channel. The problem may be with the broadcast.</li></ul>
<b>Picture has a big black box on it, but the sound is O.K.</b>	<ul style="list-style-type: none"><li>• The CC (closed caption) option may be in Text mode. Select Caption 1, or OFF in the Captions/Text menu.</li></ul>
<b>Picture has two horizontal black bars, one on top and one on bottom.</b>	<ul style="list-style-type: none"><li>• Your program is in letterbox. This means that the shape of your TV is a square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars.</li></ul>
<b>Missing Secret code</b>	<ul style="list-style-type: none"><li>• If you forget the secret code, press the remote control Button '7', '7', '7' and '7' when the display asks you to enter the secret code.</li></ul>

## Troubleshooting, cont'd

**Remote control doesn't work.**

- Make sure the batteries are fresh and installed properly.

**Menu options can't be changed or selected.**

- Try unplugging your Entertainment Machine for a few minutes, then plug it back in.

**No picture or sound when any non-cable source is selected.**

- Check to see if the source equipment has been turned on.
- Make sure that the connections are secure on the back of your Entertainment Machine and on the source equipment.

**Weak or no Stereo Sound when using a stereo VCR.**

- Check to see if all the connections are secure.
- Look in the Audio mode menu to see if all the settings are correct.
- You are using channel 3 or 4 to view your VCR. No stereo sound is present under that decision.

**The PIP inset is black or lacks contrast.**

- You might want to adjust the PIP picture settings under the PIP menu.
- Check that all the wires are connected properly.
- Check to see if your input source for PIP is set correctly.

**The PIP inset is "snow" when the source is Antenna 1.**

- Look to see if the TV/VCR button on your VCR has the TV selected or change the PIP to another source.

**Time is incorrect.**

- Make sure the time was set initially. Probably power was lost.

## Glossary

A complete list of definitions for words found in this guide.

<b>75 OHM RF CABLE</b>	The round cable that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV.
<b>A/V CABLES</b>	Audio/Video cables. Three cables - Right audio (red), Left audio (white), and Video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices.
<b>A/V DEVICE</b>	Any device that produces video or sound (VCR, DVD, cable box, or television).
<b>ADD</b>	This function lets you add new channels to the list that you'll scroll through when using your remote.
<b>AMPLIFIER</b>	An external device that amplifies sound from a television, CD player, VCR, DVD or other A/V device.
<b>ANALOG TV</b>	Traditional method of representing a television signal as a replica (analog) of the original picture and sound.
<b>ANTENNA</b>	The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna.
<b>ASPECT RATIO</b>	The ratio of the horizontal dimension to the vertical dimension of a picture. Standard television in the U.S. today is generally transmitted and displayed in a 4:3 aspect ratio. High-Definition television will normally be formatted in a wider aspect ratio, assumed to be 16:9.
<b>CAPTIONS</b>	A form of subtitling that writes out the dialog for your program.
<b>CONVERGENCE</b>	This option lets you correct for color separation in your picture.
<b>DELETE</b>	This function lets you remove channels that you don't watch from the list you'll scroll through.
<b>DIGITAL TV</b>	A new method of representing television signal as a series of binary numbers (1s and 0s). This method allows for the signal to be manipulated to eliminate redundancy to dramatically increase picture and sound quality.
<b>DOLBY DIGITAL</b>	Dolby Digital Cinema Sound is made possible by a new digital coding technique called Dolby AC-3. Dolby AC-3 produces high-quality, 5.1 channel surround sound which is six discrete separate channels for a full range of sound. Each channel can carry a different signal simultaneously (front center, front left, front right, surround left, surround right and subwoofer).
<b>INPUT</b>	Refers to the jack that receives a signal into the TV, VCR or other A/V device.

## Glossary (cont'd)

A complete list of definitions for words found in this guide.

<b>JACK</b>	A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jacks and the Audio/Video jacks that are color-coded.
<b>MODE</b>	The mode determines the type of device (TV, VCR, Cable, Aux) that the remote is controlling.
<b>MONO SOUND</b>	Mono (monaural) sound is one channel of sound. On more than one speaker all the speakers play the same audio.
<b>OUTPUT</b>	Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device.
<b>PIP</b>	This is the most common way to refer to the Picture-In-Picture (PIP) option.
<b>PIP SNAPSHOT</b>	Press to capture and freeze main picture within large PIP frame. Press a second time and receive normal PIP from another channel. Press again to remove PIP from the screen.
<b>SECOND AUDIO PROGRAMMING/SAP</b>	Second Audio Programming (SAP) is another, separate, audio channel available with some programming. Choosing SAP often refers to listening to audio in another language, such as Spanish or French.
<b>SIGNAL</b>	Picture and sound traveling through cable, or on the air, to your television screen.
<b>SOURCE</b>	The term for the equipment that provides audio and video information to your Entertainment Machine. Antenna, VCR, DVD players, or Cable Boxes are examples of sources.
<b>STEREO SOUND</b>	Stereo (stereophonic) sound refers to audio that's divided into right and left sides.
<b>SURF</b>	This function creates a customized list of your favorite channels. You can access this group of channels by pushing the surf button on the remote.
<b>TEXT</b>	Arbitrary text not related to the program.
<b>TUNER</b>	Any device that picks up broadcast signals and turns them into picture and sound.



## Product Specifications

### Specifications

Power requirements	120V, 60 Hz	
Number of inputs/outputs		
Video (In)	3	1 Vp-p, 75 ohms unbalanced, sync negative
S Video (In)	2	Y: 1 Vp-p, 75 ohms unbalanced, sync negative
S Video (Out)	1	C: 0.280 Vp-p (burst signal), 75 ohms
Audio (In)	6	500 mVrms (100%) modulation), Impedance: 47 kilohms
Center Mode (In)	1	
Audio out	1	More than 408 mVrms at the maximum volume setting (variable)
	1	More than 408 mVrms (fix)
		Impedance (output): 2 kilohms
Component input	2	Y: 1.0 Vp-p, 75 ohms w/sync PB: 0.7 Vp-p, 75 ohms PR: 0.7 Vp-p, 75 ohms
PC/DTV Inputs	1	15 pin Sub "D" Female
Speaker output (W)	15W x2	
Power consumption (W)		
In use (max.)	330W	
In standby	8W	
TV		
Mass (lbs)	205	
Television system	American TV Standard, NTSC, ATSC with STB	
Channel coverage	VHF: 2 - 13 UHF: 14 - 69 CATV: 1 - 125	
Picture tubes	(3) - 7" Liquid cooled, Hi-Resolution	
Antenna	75 ohm external terminal for VHF/UHF	
Screen Size	60" Width	
Supplied accessories	Remote control, batteries 2 size AA (Alkaline battery), IR-Extender	
Screen Aspect Ratio	16 x 9	





## Your Zenith Warranty

**Service Labor:** During a period of one year from effective warranty date, Zenith will provide service labor when needed, as a result of manufacturing defects.

**Parts:** New or remanufactured replacements for factory-defective parts will be supplied by Zenith for one year from effective warranty date (color picture tubes—two years). Such replacement parts are warranted for the remaining portion of the original warranty period.

Any repair may require that the D60WLCD be returned to Zenith. Zenith maintains a limited inventory of replacement or loaner D60WLCDs for repair purposes, and a replacement or loaner unit may not be immediately available at the time your D60WLCD requires repair.

**Not Covered:** This warranty covers manufacturing defects and does not cover installation, adjustment of customer controls, installation or repair of antenna systems, cable converters or cable company-supplied equipment; it also does not cover damage due to misuse, abuse, negligence, acts of God or other causes beyond the control of Zenith. Any alteration of the product after manufacture voids this warranty in its entirety.

**THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ZENITH SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS IN CONNECTION WITH THIS PRODUCT.**

This warranty is limited to the operation of the product in compliance with the Sarnoff bit-streams and with the listed compatible products. The D60WLCD has been designed to be compatible with many of the operating and software protocols which may ultimately be used in digital or high-definition television and which are still being established or refined by third parties. The D60WLCD may have limited capabilities with any such protocols designated after the date of its actual manufacture.

**Effective Warranty Date:** Warranty begins on the date of sale of D60WLCD. **For your convenience, keep the dated bill of sale or delivery ticket as evidence of the purchase date.**

**Operating Guide:** Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls.

**Antenna:** Reception problems caused by inadequate antenna or faulty antenna connections are the owner's responsibility.

**Important:** Product Registration—Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you.

**Warranty Service:** For warranty service information, contact Zenith. Parts and service labor that are Zenith's responsibility will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center below. You must provide the model number, serial number and date of purchase or date of original installation.

**ZENITH Service  
Zenith Customer Information Center**

201 James Record Rd., Building 3,  
Huntsville, AL 35824  
Telephone (256) 772-1515  
Mon-Fri, 7:00 a.m.-8:00 p.m. CST  
Sat. 8:00 a.m.-5:00 p.m. CST  
www.zenith.com

**Digital TV Hotline:  
1-847-391-7000**

**ZENITH FACTORY OWNED SERVICE CENTERS**

**801 E. Roosevelt Rd  
Lombard, IL 60148  
(630) 705-2830**

Home & Carry-in Service  
Television/VCR  
Parts and Accessories  
PTV/Camcorders

**201 James Record Rd.  
Building 4  
Huntsville, AL 35824  
(256) 774-4025**

Service Hours:  
M-F 8-5  
Will accept UPS Shipments